

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

These instructions are also available on our website. Please visit

www.hot-europe.com



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

WARNING: This appliance must not be taken into the bathroom.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

WARNING: Do not use this appliance on synthetic hair or wigs.

NOTE: Use on dry hair only.

WARNING: Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU, the ROHS Directive 2011/65/EU and the Energy and using Products Directive 2009/125/EC.

GUARANTEE AND SERVICE SECTION:

Your Revlon appliance is guaranteed against defects under normal use for four years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your receipt or other proof of purchase for all claims within the warranty period. The guarantee becomes void if the proof of purchase is not presented. For all claims within the warranty period please contact our Support Team. This guarantee does not cover defects which have occurred due to misuse, abuse, or are caused by failure to follow the instructions contained within this manual. This does not affect your consumer statutory rights. The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3416 - product manufactured week 34 of the year 2016.

For product support, please visit us at:

www.hot-europe.com/support

Or contact us by phone:

+44 (0) 115 965 7430

For product information, visit us at:

www.revlonbeautycare.com



This appliance complies with EU legislation 2012/19/EU on end of life recycling. Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful life.

Please DO NOT dispose of appliance in normal household waste.

Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

220-240V ~ 50-60Hz 35W

The REVLON® trademark is used under license from Revlon, by Helen of Troy Limited.

Made in China.

European Headquarters

Kaz Europe Sàrl, Place Chauderon 18, CH-1003 Lausanne, Switzerland.

HOT (UK) Ltd, 1-4 Jessops Riverside, 800 Brightside Lane, Sheffield, S9 2RX United Kingdom.

©2016 Revlon. All rights reserved. (AW009474)

AW ISSUE No#: 1 Date: 09.13.16

REVLON®



SALON LONG-LASTING CURLS AND WAVES

ROSE GOLD CURLING IRON

RVIR1159UK



OPERATING INSTRUCTIONS

This appliance is intended for household use only.
The appearance of this appliance may differ from the illustration.
Only use this appliance for its intended purpose, as described in this manual.

ROSE GOLD TECHNOLOGY - The combination of gold and copper gives you the ultimate styling surface to create longer-lasting styles. Gold provides direct heat, while copper is a great conductor of heat, providing instant recovery and fast heat-up.

HEATING THE APPLIANCE - Plug the power supply cord into a mains socket. To turn the appliance on, push the switch to the "On" (I) position. The indicator light will glow red to indicate appliance is operating. To alter the temperature, adjust the Temperature Control to the number that corresponds to the heating level desired. Never leave this appliance on and unattended. To turn the appliance "Off" (0), push the switch to the (0) position and unplug the power supply cord from the mains socket.

IMPORTANT - For first use it is recommended that you start with the lowest heat setting and gradually increase temperature to find a suitable level. Only use as much heat as you need for effective styling. Fine hair will require a low heat setting and thicker, less manageable hair will usually require a medium-high heat setting. For best results, follow the guidelines below:

HAIR TYPE	HEAT LEVEL	HEAT SETTING
Fine	LOW	140 - 160
Normal	MEDIUM	160 - 180
Thick	HIGH	180 - 200

STYLING - Separate a two-inch section of hair, use the clamp to secure hair to the barrel and roll hair around the barrel to the root. Pause, unroll and release hair from the clamp. Allow hair to cool before styling. For soft body and extra volume, style with a comb or brush. For sculpted curls simply shake head allowing curls to fall together, separating curls with fingers where required.

CLEANING - Always unplug the appliance from its power source after each use and allow it to cool. To clean, wipe the appliance with a damp cloth. Make certain the appliance is completely dry before using. Keep heated surfaces clean and free of dust, dirt, styling sprays and gels.

STORAGE - Always unplug when not in use.

Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

- ### FEATURES
- A. COOL TIP
 - B. CLAMP
 - C. 32MM ROSE GOLD BARREL
 - D. THUMB GRIP
 - E. ON / OFF SWITCH
 - F. RUBBERISED HANDLE GRIP
 - G. SWIVEL CORD
 - H. ADJUSTABLE TEMPERATURE CONTROL
 - I. HIGH TEMPERATURE 200°C
 - J. "ON" INDICATOR LIGHT
 - K. SAFETY STAND

