

## KEEP THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

This appliance is intended for household use only.



**WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

**WARNING:** This appliance must not be taken into the bathroom.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING:** Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

**WARNING:** Do not use this appliance on synthetic hair or wigs.

NOTE: Use on dry hair only.

**WARNING:** Should this product malfunction, do not attempt to repair it.

This appliance has no user-serviceable parts or components.

**WARNING:** Do not touch the cool tip when in use, unless wearing heat resistant gloves.

## Guarantee and Service section:

Your REVLON appliance is guaranteed against defects under normal use for 2 years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the guarantee period, it will be replaced.

Please retain your till receipt or other proof of purchase for all claims within the guarantee period. The guarantee becomes void if the proof of purchase is not presented. Simply take the appliance back to the retailer from where purchased, along with a valid till receipt, for exchange free of charge. This guarantee does not cover defects which have occurred due to misuse, abuse or are caused by failure to follow the instructions contained within this manual.

UK only: This does not affect your consumer statutory rights.

The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3421 - product manufactured week 34 of the year 2021.

The appearance of this appliance may differ from the illustration.

For product support, please visit us at: [www.HelenofTroy.com/emea-en/Support](http://www.HelenofTroy.com/emea-en/Support)

Or contact us by phone: +44 (0) 207 949 0115

For product information, visit us at: [www.revlonhairtools.shop](http://www.revlonhairtools.shop)

These instructions are also available on our website.

Please visit [www.HelenofTroy.com/emea-en/Support](http://www.HelenofTroy.com/emea-en/Support)



This appliance complies with EU legislation 2012/19/EU on end of life recycling.

Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful life.

Please DO NOT dispose of appliance in normal household waste. Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU, the ERP Directive 2009/125/EC, and the ROHS Directive 2011/65/EU.

# REVLON®



## REVLON®

120-240V ~ 50-60Hz 50W

Type#: ER221JD

The REVLO<sup>®</sup> trademark is used under licence from Revlon by Helen of Troy Limited.



Kaz Europe Sàrl  
Q-Center, Chaux 4  
CH-1030 Bussigny - Switzerland



Made and printed in China

© 2024, Helen of Troy. All rights reserved. (AW016738)

AW ISSUE No#: 2 Date: 15NOV23

## SMOOTHSTAY™

25mm COCONUT OIL-INFUSED STRAIGHTENER

RVST2211PUK1

## OPERATING INSTRUCTIONS

This appliance is intended for household use only.  
The appearance of this appliance may differ from the illustration.  
Only use this appliance for its intended purpose, as described in this manual.

### 25MM CERAMIC COATING WITH COCONUT OIL- INFUSION

Three layers of ceramic coating help reduce damage from over-styling with even heat distribution that penetrates hair quickly and styles from the inside out while coconut oil infusion provides visibly smooth styles with long lasting results.

### CERAMIC TOURMALINE IONIC TECHNOLOGY

Helps to reduce static and frizz and enhances shine for silky-smooth results.

### TRUE-GRIP ROUNDED PLATES

Floating plate for smooth glide. Rounded plates create curls or loose waves.

### HEATING CONTROL

When using the styling iron for the first time, begin using the LOWEST heat setting and test on a small section of hair for 5 to 8 seconds. If you want to use a higher setting, be sure to gradually increase the temperature. Never style hair for the first time on a high setting as this may damage your hair. Use only as much heat as needed for effective styling. Over time, using higher heat than is necessary can result in hair damage.

### RECOMMENDED HAIR TYPE USAGE

For first use it is recommended that you start with the lowest heat setting and gradually increase temperature to find a suitable level. Only use as much heat as you need for effective styling. Fine hair will require a low heat setting and thicker less manageable hair will usually require a medium-high heat setting.

### STYLING

To straighten, separate a 25mm section of hair, gently place the hair between the hot smoothing plates, and clamp down firmly on the handles. You will achieve the best results by working from the scalp to the ends of the hair. Leave in fine hair for 5 to 8 seconds and for 10 to 15 seconds in thick hair. Once hair is heated, slide the plates carefully down the isolated section, making sure the hair is heated and straightened all the way to the ends. Hold the ends of the hair while smoothing the section. To release hair, just release the pressure on the handles and allow the hair to gently slip out from the plates.

Create a "flick" by using the rounded end of the plates to curl up or under at the end of hair. To create a curl from the styler. Take a section of hair, placing the hair between the plates. Simultaneously, roll and glide the styler down through the hair, working from roots to ends. For defined curls take a smaller width of hair.

### AUTO SHUT OFF

This appliance is fitted with an automatic shut off feature, the appliance will automatically turn off if no buttons are operated within 60 minutes. To reactivate press the ON/OFF button again. Press and hold for at least 1.5 seconds to turn the appliance off.

### PLATE-LOCKING SWITCH

This appliance has a lock which ensures the product remains in a closed position when not in use. The appliance can be locked (🔒) by pushing the switch towards the plates, while pressing the handles together to lock the plates. To unlock the appliance press the handles together and push the switch away from the plates.

WARNING: DO NOT engage the plate-locking switch during styling, and DO NOT lock the plates onto hair, as serious damage to hair or even injury could result.

### AUTOMATIC WORLDWIDE DUAL VOLTAGE

This appliance will automatically adjust to the correct voltage.

### CLEANING

Always unplug the appliance from its power source after each use and allow it to cool. To clean, wipe the styler and plates with a damp cloth. Make certain the appliance is completely dry before using. Keep heated surfaces clean and free of dust, dirt, styling sprays and gels.

### STORAGE

Always unplug when not in use.

Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

## FEATURES

- A. 25mm Ceramic Tourmaline and Coconut oil plates
- B. Rounded plates
- C. 10 LED temperature display
- D. Separate +/- temperature buttons
- E. ON/OFF power button
- F. Plate locking switch
- G. 1.8m Swivel cord
- H. Hanging ring
- I. Storage pouch




# Helen of Troy

Start Date 27OCT22  
Model# **RVST2211PUK1**  
UK/E UK  
Agile AW# AW016738  
AW Issue# No#: 2 Date 15NOV23  
Languages English  
File Name rvstib.RVST2211PUK1.AW016738.INDD  
Designer Loc Pham  
Factory JINDELI  
Bar Code# n/a

## Packaging Specifications

Dimensions H185 x W89 mm Finished size  
Material 70gsm wood free paper  
Finishes Roll fold  
Colours Black

This proof is not intended for colour matching but for colour indication

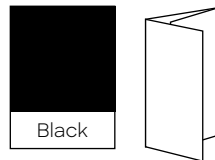

## Proof Stages

27OCT22 Created artwork based on UK version, added FSC logo and sent for review  
18NOV22 Updated guarantee copy and uploaded for production  
15NOV23 Updated FSC logo and sent for certification  
16NOV23 Uploaded for production

## Approvals

BM/MKT	23JUN22	Camille Bosson
BM/MKT	27OCT22	Simona Tomassini
MKT MNG	---	---
Design	16NOV23	Loc Pham
Eng. UK/E	23JUN22	James Briscoe
Comp. UK/E	23JUN22	Seray Sahin
Eng. APO	23JUN22	N. Han / N. Zhong / J.Zhang
Compl. APO	23JUN22	John Guo
Legal	---	---
Licensor	---	---

## Helen of Troy - Kaz Europe Sàrl

Creative Department  
Route de la Chaux 4  
CH-1030 Bussigny - Switzerland