

Tondeuse cheveux

CONSEILS DE SÉCURITÉ

- Pour votre sécurité, cet appareil est conforme aux normes et réglementations applicables (Directive Basse Tension, Compatibilité Electromagnétique, Environnement...).
- Vérifiez que la tension de votre installation électrique correspond à celle de votre appareil.
- Toute erreur de branchement peut causer des dommages irréversibles non couverts par la garantie.
- L'installation de l'appareil et son utilisation doivent toutefois être conformes aux normes en vigueur dans votre pays.
- Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus et des personnes avec des capacités physiques, mentales ou sensorielles limitées ou sans expérience et de connaissances, s'ils ont reçu un encadrement ou des instructions concernant l'utilisation de l'appareil dans toute sécurité et comprennent les risques encourus. Les enfants ne doivent pas jouer avec l'appareil. Les enfants ne doivent ni nettoyer l'appareil ni s'occuper de son entretien sans surveillance. Il convient de surveiller les enfants pour assurer qu'ils ne jouent pas avec l'appareil.
- Si le câble d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après vente ou des personnes de qualification similaire afin d'éviter un danger.
- MISE EN GARDE : Maintenir l'appareil sec.**
- Si les broches des pièces de la fiche sont endommagées, le bloc d'alimentation doit être mis au rebut.
- Le cordon ou le cordon flexible externe de ce transformateur ne peut être remplacé; si le cordon est endommagé ou ne fonctionne pas, le transformateur doit être mis au rebut.
- Ne pas utiliser cet appareil près des baignoires, des douche, des lavabos ou autres récipients contenant de l'eau.
- Lorsque l'appareil est utilisé dans une salle de bains, débranchez le après usage car la présence de l'eau peut entraîner un court-circuit dans l'appareil ou l'endommager.
- Cet appareil n'est pas prédestiné pour l'entretien des barbes, mais il convient de respecter les consignes de sécurité lorsque l'on utilise l'appareil sur les cheveux (par exemple, lorsqu'il est utilisé pour couper les cheveux des enfants).

GARANTIE
Jeder Eingriff, außer den im Haushalt üblichen Reinigung und Pflege durch den Kunden muss durch den Kundendienst erfolgen.

Dieses Gerät ist ausschließlich für die Haushaltserhaltung bestimmt.

Es darf nicht für gewerbliche Zwecke eingesetzt werden.

Bei unsachgemäßer Benutzung erlischt die Garantie.

BEDEUTUNG DES SYMBOLS „DURCHGEKREISTE MÜLLTÖNTEN“:

○ L'appareil contiene numerosi materiali valorizzabili o riciclabili. Gérat am Ende seiner Lebensdauer getrennt vom unsortierten Siedlungsabfall zu erlassen ist.

GETRENNTE ERFASSUNG VON ALTERGERÄTEN
Elektro- und Elektronikgeräte, die abfallfrei geworden sind, werden als Altergeräte bezeichnet. Besitzer von Altergeräten aus privaten Haushalten können diese bei den Sammelstellen der öffentlich-rechtlichen Entsorgungsträger oder bei den Herstellern oder Vertretern im Sinne des Elektro-G eingerichteter Rücknahmestellen unentgeltlich abgeben. Auskünfte zur nächsten Abfallabfuhrstelle erhalten Sie beim Hersteller oder Händler.

DATENSCHUTZ
Wir weisen alle Endnutzer von Elektro- und Elektronikgeräten darauf hin, dass Sie für das Lösen von personenbezogenen Daten auf den zu entsorgenden Altergeräten selbst verantwortlich sind.

Diese Sicherheitshinweise sind auch auf unserer Website www.rowenta.com verfügbar.

PARTICIPONS À LA PROTECTION DE L'ENVIRONNEMENT !
① Votre appareil contient de nombreux matériaux valorisables ou recyclables. Confiez celui-ci dans un point de collecte ou à défaut dans un centre service agréé pour que son traitement soit effectué.

Les instructions sont également disponibles sur notre site Internet www.rowenta.com

Read the instructions before use to avoid any danger due to misuse.

Hair clipper

SAFETY INSTRUCTIONS

• For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).

• Check that the voltage of your electricity supply matches the voltage of your appliance. A wrong voltage when connecting the appliance can cause irreparable harm, not guarantee the proper function.

• The installation of the appliance and its use must however comply with the standards in force in your country.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should not play with the appliance. Cleaning and user maintenance must not be carried out by children under the age of 8 years unless it has been specifically arranged.

• If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the appliance dry.

• Do not connect the cable of the transformer to another power source.

• Do not use the appliance near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- your appliance has failed;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

• CAUTION! Keep the plug-in power supply dry.

• If any pins of the plug parts are damaged, the plug-in transformer cannot be replaced; if the cord is damaged or does not work, the transformer shall be scrapped.

• Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers.

• When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.

• The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless given supervision or instruction concerning use of the appliance in a safe way and under supervision of a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

• Stop using your appliance and contact an Authorised Service Centre if:

- it does not work correctly;

- if the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

</div

