

1. GENERAL DESCRIPTION

- A. Tongue
B. LED display
C. +/- button to reduce/increase temperature
D. ON/OFF switch
E. Plates
F. Rotating power cord outlet
G. Power supply cord
H. Lock System (to open and unlock the tongue)
I. Evaporation system

For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...)

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom.

WARNING: do not use this appliance near bathtubs, showers, basins or other vessels containing water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities...

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities...

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- Stop using your appliance and contact an Authorised Service Centre if:
- your appliance has fallen.
- it does not work correctly.
- The appliance is equipped with a heat sensitive safety device...

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes.

BRINGING INTO SERVICE: Lock System (Fig. 1): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the Lock System to the front.

MISE EN SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

USE: Use on damp hair: WARNING: Do not place your hands over the evaporation holes. Do not use the appliance on synthetic hair (wigs, extensions, etc.).

UTILISATION: Utilisation sur cheveux secs: Les cheveux doivent être détrempés, propres et secs ou légèrement humides...

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

1. DESCRIPTION GENERALE

- A. Pince
B. Affichage LED à 6 positions
C. Bouton +/- pour diminuer/augmenter la température.
D. Bouton marche/arrêt
E. Plaques lisantes
F. Sortie de cordon rotative
G. Cordon d'alimentation
H. Lock System (verrouillage et déverrouillage des pinces)
I. Système d'évaporation

Pour votre sécurité, cet appareil est conforme aux normes et réglementations applicables (Directives Bassa Tensione, Compatibilité Electromagnétique, Environnemental...)

Pour une protection supplémentaire, l'installation d'un dispositif à courant résiduel (RCD) ayant un courant de fonctionnement résiduel nominal n'excédant pas 30 mA est conseillée dans le circuit électrique alimentant la salle de bain.

ATTENTION: ne pas utiliser cet appareil près des baignoires, douches, lavabos ou autres récipients contenant de l'eau.

Lorsque l'appareil est utilisé dans une salle de bain, débranchez-le après usage, car la proximité de l'eau représente un danger, même lorsque l'appareil est éteint.

Cet appareil n'est pas prévu pour être utilisé par des personnes (y compris les enfants) dont les capacités physiques, sensorielles ou mentales sont réduites...

Cet appareil peut être utilisé par des enfants âgés de 8 ans et plus et des personnes ayant des capacités physiques, sensorielles ou mentales réduites...

Si le câble d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après-vente ou des personnes de qualification similaire afin d'éviter un danger.

Si le câble d'alimentation est endommagé, il doit être remplacé par le fabricant, son service après-vente ou des personnes de qualification similaire afin d'éviter un danger.

- Utilisez pas votre appareil et contactez un Centre Service Agréé si:
- votre appareil est tombé, il ne fonctionne pas normalement.
- L'appareil est équipé d'un système de sécurité thermique. En cas de surchauffe (id est par exemple à l'enclenchement de la grille arrière), l'appareil s'arrête automatiquement et contacte le SAV.
- L'appareil doit être débranché avant le nettoyage et l'entretien, en cas d'anomalie de fonctionnement, dès que vous avez terminé de l'utiliser.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes.

BRINGING INTO SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

MISE EN SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

UTILISATION: Utilisation sur cheveux secs: Les cheveux doivent être détrempés, propres et secs ou légèrement humides...

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

1. ALGEMEINE BESCHREIBUNG

- A. Klemmen
B. LED-Anzeige/6 Positionen
C. Installknopf +/- für vermindern/erhöhen der Temperatur.
D. An-/Umschalttaste
E. Glättplatten
F. Draaisensorgang
G. Netzanschlusskabel
H. Lock-System (Verriegelung und Entriegelung der Glättplatten)
I. Verdampfungssystem

Lesen Sie die Gebrauchsanleitung sorgfältig vor der ersten Inbetriebnahme Ihres Gerätes durch. Eine unsachgemäße Bedienung erhöht die Gefahr von jeglicher Haftung...

Zum zusätzlichen Schutz sollte das Gerät an den Stromkreis des Badezimmers mit einer Fehlerstrom-Schützvorrichtung für Wechselstrom mit 30mA Nennfehlerstrom angeschlossen werden.

WAARSCHUWING: Gebruik dit apparaat niet in de buurt van badkuipen, douches, wasbakken of andere water bevattende reservoirs.

Wanneer het apparaat gebruikt wordt in een badkamer, haal dan de stekker na gebruik uit het stopcontact, aangezien de nabijheid van water gevaar oplevert zelfs wanneer het apparaat is uitgeschakeld.

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

- Non utilizzare l'apparecchio e contattate un Centro Assistenza autorizzato se:
- l'apparecchio è caduto, se non funziona normalmente.
- L'apparecchio è dotato di un sistema di sicurezza termica. In caso di surriscaldamento (dovuto per esempio alla griglia posteriore), l'apparecchio si spegnerà automaticamente: contattate il Servizio Assistenza.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes.

BRINGING INTO SERVICE: Lock System (Fig. 1): Para abrir las pinzas, tire del « Lock System » hacia atrás. Para bloquear las pinzas: cierre las pinzas y desplace el « Lock System » hacia adelante.

MISE EN SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

UTILISATION: Utilisation sur cheveux secs: Les cheveux doivent être détrempés, propres et secs ou légèrement humides...

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

1. ALGEMENE BESCHRIJVING

- A. Klemmen
B. LED-aanwijzing/6 standen
C. Installknop +/- voor vermindern/verhogen van de temperatuur
D. Aan/uit-schakelaar
E. Glättglatplaten
F. Draaisensorgang
G. Voedingkabel
H. Lock-System (verriegelend en ontgrendelend van de klemmen)
I. Verdampingsstelsel

Lezen Sie die Gebrauchsanleitung sorgfältig vor der ersten Inbetriebnahme Ihres Gerätes durch. Eine unsachgemäße Bedienung erhöht die Gefahr von jeglicher Haftung...

Zum zusätzlichen Schutz sollte das Gerät an den Stromkreis des Badezimmers mit einer Fehlerstrom-Schützvorrichtung für Wechselstrom mit 30mA Nennfehlerstrom angeschlossen werden.

WAARSCHUWING: Gebruik dit apparaat niet in de buurt van badkuipen, douches, wasbakken of andere water bevattende reservoirs.

Wanneer het apparaat gebruikt wordt in een badkamer, haal dan de stekker na gebruik uit het stopcontact, aangezien de nabijheid van water gevaar oplevert zelfs wanneer het apparaat is uitgeschakeld.

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

- Non utilizzare l'apparecchio e contattate un Centro Assistenza autorizzato se:
- l'apparecchio è caduto, se non funziona normalmente.
- L'apparecchio è dotato di un sistema di sicurezza termica. In caso di surriscaldamento (dovuto per esempio alla griglia posteriore), l'apparecchio si spegnerà automaticamente: contattate il Servizio Assistenza.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes.

BRINGING INTO SERVICE: Lock System (Fig. 1): Para abrir las pinzas, tire del « Lock System » hacia atrás. Para bloquear las pinzas: cierre las pinzas y desplace el « Lock System » hacia adelante.

MISE EN SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

UTILISATION: Utilisation sur cheveux secs: Les cheveux doivent être détrempés, propres et secs ou légèrement humides...

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

1. DESCRIPCIÓN GENERAL

- A. Pincas
B. Visualización LED con 6 posiciones
C. Botón +/- para disminuir/aumentar la temperatura.
D. Interruptor On/Off
E. Placas lisantes
F. Salida de cable rotativa
G. Cavo de alimentación
H. Lock System (verru y desbloqueo de pincas)
I. Sistema de evaporación

Para su seguridad, este aparato está conforme alle normas e regolamentazioni applicabili (Direttiva Bassa Tensione, Compatibilità Electromagnética, Ambientale...)

Para mayor protección, en el circuito eléctrico que alimenta al baño es recomendable instalar un dispositivo de corriente residual (RCD) con una corriente operativa residual nominal de como máximo 30 mA.

ADVERTENCIA: No utilice el electrodoméstico cerca de bañeras, duchas, lavabos u otros elementos que contengan agua.

Cuando esté utilizando el electrodoméstico en el baño, desenchúfelo después de su uso, pues su proximidad al agua supone un riesgo incluso estando apagado.

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

- Non utilizzare l'apparecchio e contattate un Centro Assistenza autorizzato se:
- l'apparecchio è caduto, se non funziona normalmente.
- L'apparecchio è dotato di un sistema di sicurezza termica. In caso di surriscaldamento (dovuto per esempio alla griglia posteriore), l'apparecchio si spegnerà automaticamente: contattate il Servizio Assistenza.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes.

BRINGING INTO SERVICE: Lock System (Fig. 1): Para abrir las pinzas, tire del « Lock System » hacia atrás. Para bloquear las pinzas: cierre las pinzas y desplace el « Lock System » hacia adelante.

MISE EN SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

UTILISATION: Utilisation sur cheveux secs: Les cheveux doivent être détrempés, propres et secs ou légèrement humides...

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

1. DESCRIZIONE GENERALE

- A. Pincas
B. Visualizzazione LED con 6 posizioni
C. Botón +/- para disminuir/aumentar la temperatura.
D. Interruptor On/Off
E. Placas lisantes
F. Salida de cable rotativa
G. Cavo de alimentación
H. Lock System (verru y desbloqueo de pincas)
I. Sistema de evaporación

Para su seguridad, este aparato está conforme alle normas e regolamentazioni applicabili (Direttiva Bassa Tensione, Compatibilità Electromagnética, Ambientale...)

Para mayor protección, en el circuito eléctrico que alimenta al baño es recomendable instalar un dispositivo de corriente residual (RCD) con una corriente operativa residual nominal de como máximo 30 mA.

ADVERTENCIA: No utilice el electrodoméstico cerca de bañeras, duchas, lavabos u otros elementos que contengan agua.

Cuando esté utilizando el electrodoméstico en el baño, desenchúfelo después de su uso, pues su proximidad al agua supone un riesgo incluso estando apagado.

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

Se il cavo di alimentazione è danneggiato, deve essere sostituito dal fabbricante, dal suo servizio assistenza o da persone con qualifica simile per evitare pericoli.

- Non utilizzare l'apparecchio e contattate un Centro Assistenza autorizzato se:
- l'apparecchio è caduto, se non funziona normalmente.
- L'apparecchio è dotato di un sistema di sicurezza termica. In caso di surriscaldamento (dovuto per esempio alla griglia posteriore), l'apparecchio si spegnerà automaticamente: contattate il Servizio Assistenza.

GUARANTEE: Your appliance is designed for use in the home only. It should not be used for professional purposes.

BRINGING INTO SERVICE: Lock System (Fig. 1): Para abrir las pinzas, tire del « Lock System » hacia atrás. Para bloquear las pinzas: cierre las pinzas y desplace el « Lock System » hacia adelante.

MISE EN SERVICE: Lock System (Fig. 1): Pour ouvrir les pinces, tirez le « Lock System » vers l'arrière. Pour verrouiller les pinces: fermez les pinces et poussez le « Lock System » vers l'avant.

UTILISATION: Utilisation sur cheveux secs: Les cheveux doivent être détrempés, propres et secs ou légèrement humides...

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

HAIRDRESSER'S TIPS: Always start by smoothing the locks underneath. Work from the back of the neck first before going onto the side of the head and finish with the front.

1. DESCRIZIONE GENERALE

- A. Pincas
B. Visualizzazione LED con 6 posizioni
C. Botón +/- para disminuir/aumentar la temperatura.
D. Interruptor ligar/desligar
E. Placas lisantes
F. Salida de cabo rotativa
G. Cabo de alimentación
H. Lock System (verru y desbloqueo das pinças)
I. Sistema de evaporação

Para a sua segurança, este aparelho está em conformidade com as normas e regulamentos aplicáveis (Direttiva Bassa Tensione, Compatibilità Electromagnética, Ambientale...)

Para maior proteção, recomenda-se a instalação de um dispositivo de corrente residual (RCD) com uma corrente nominal de operação residual não superior a 30 mA no circuito elétrico que fornece energia à casa de banho.

ADVERTÊNCIA: Não utilize este aparelho perto de banheiras, chuveiros, lavatórios ou outros recipientes com água.

Cuando esté utilizando el electrodoméstico en el baño, desenchúfelo después de su uso, pues su proximidad al agua supone un riesgo incluso estando apagado.

Este electrodoméstico puede ser usado por niños de 8 años en adelante y por personas con discapacidades físicas, sensoriales o mentales o por falta de conocimientos...

