

# REMINGTON®

## Advanced Colour Protect Intelligent Straightener



**S8605**




[www.remington.co.uk](http://www.remington.co.uk)

**Register online for £10,000 prize draw**  
**EXTRA year guarantee FREE rewards gallery**

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.



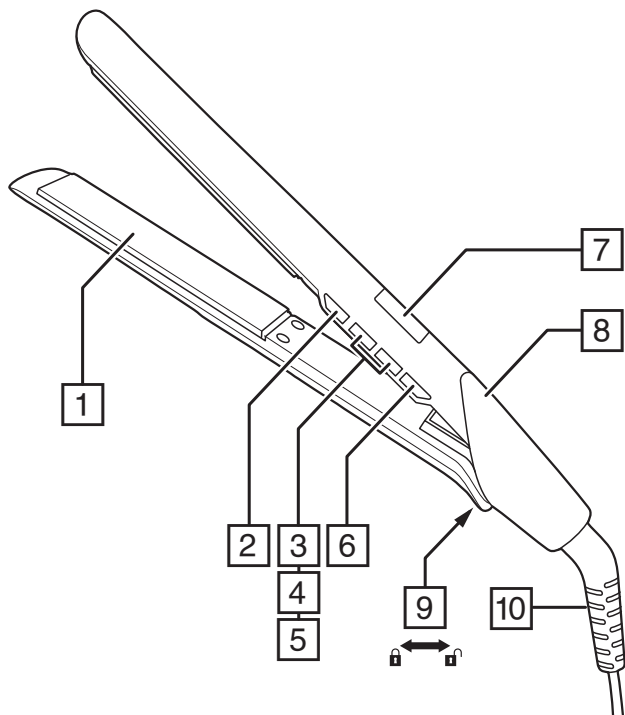


Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

**WARNING: This appliance is hot. Keep out of reach of children at all times.**

---

## IMPORTANT SAFEGUARDS

---

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
  -  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
  - When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
  - For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom\*.
- \* Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the appliance is not permitted in the UK (see BS7671).
- Burn hazard. Keep the appliance out of reach from young children, particularly during use and while cooling down.
  - Never leave the appliance unattended when it is connected to the power supply.
  - Always place the appliance with its stand, if any, on a heat-resistant, stable flat surface.

- If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.
- Do not allow any part of the appliance touch the face, neck or scalp.
- Keep the power plug and cord away from heated surfaces.
- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- Do not twist or kink the cable, or wrap it round the appliance. Check the cord regularly for any signs of damage.
- This appliance is not intended for commercial or salon use.
- WARNING: Contains traces of nuts

---

## PARTS

---

- |  |  |
|--|--|
| 1. Advanced ceramic coating infused with shea oil and U.V. filters | 6. On/Off button                                 |
| 2. Colour protect heat sensor on/off button                        | 7. Display                                       |
| 3. Temperature controls  | 8. Colour protect heat sensor on indicator light |
| 4. Temperature boost function                                      | 9. Hinge lock                                    |
| 5. Temperature lock function                                       | 10. Swivel cord                                  |
|  | 11. Heat resistant pouch (not shown)             |

---

## ADDITIONAL FEATURES


---

- Fast heat up—ready to use in 15 seconds.
- Automatic safety shut off – this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

---

## INSTRUCTIONS FOR USE

---

- Before use, ensure the hair is clean, dry and tangle-free.
  - For extra protection use a heat protection spray.
  - Hairsprays contain flammable material - do not use while using this product.
  - Section the hair prior to styling. Style the lower layers first.
1. When your straightener is plugged in but not turned on the lock symbol  will come on to show that it is in standby mode.
  2. Press and hold the on/off button to switch on.

3. Select the appropriate temperature for your hair type using the "+" and "-" temperature controls on the side of the product. Start styling on lower temperatures first.
4. The "+" button will increase the temperature and the "-" button will decrease the temperature.

### Recommended Temperatures


Temperature	Hair type
150°C - 170°C	Thin / fine, damaged or bleached hair
190°C - 210°C	Normal, healthy hair
210°C - 230°C	Thick and difficult to style hair

6. The temperature display will flash until the selected temperature is reached.
7. Working on one section at a time run the straightener through the entire length of the hair, without stopping.

### Intelligent Colour Protect Heat Sensor

- Press the ∞ button to activate the Intelligent Colour Protect Heat Sensor.
- If the Intelligent Colour Protect Heat Sensor is on during styling, the indicator light will come on indicating the sensor is monitoring the hair temperature and continually regulating the heat output, helping prevent colour fade caused by overheating. These temperature changes are not displayed on the product but happen quickly and automatically during styling.

### Temperature Lock Function

- Set the desired temperature using the + and - buttons then lock the settings by pressing the "-" button for 2 seconds. The  symbol will appear on the temperature display.
- To unlock the temperature setting, press and hold the "-" button for 2 seconds.

### Memory Function

- Each time you use the product it will automatically set itself to the last temperature used.

### Temperature Boost Function

- For quick touch ups of stubborn, hard to style sections.
- The temperature boost function boosts the temperature to 230°C.
- Hold the "+" button for 2 seconds to operate.
- **Caution:** the highest temperature is not suitable for every hair type. If you plan to use this straightener on the boost setting of 230°C please test on a small section of your hair first.

---

## STORAGE

---

### Let the appliance cool down before cleaning and storing away

The plates can be locked together for easy storage:

To lock, close the plates and slide the hinge lock backwards (towards the cord) until it stops.

To unlock, slide the hinge lock forwards (towards the plates).

**NOTE:** Do not heat the unit in the locked position.

---

## CLEANING AND MAINTENANCE

---

- Unplug the appliance and allow to cool.
  - Wipe all the surfaces with a damp cloth.
  - Don't use harsh or abrasive cleaning agents or solvents.
- 

## RECYCLING

---



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

---

## SERVICE AND GUARANTEE

---



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the model number to hand, as we won't be able to help you without it. The model number can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)


---

## SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.ie.remington-europe.com](http://www.ie.remington-europe.com)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.

# **Ref. No. S8605**

## **Type No. S13A**

18/UK/ S8605 T22-7000363 Version 06 /18

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2018 Spectrum Brands, Inc.