

DILATOR YOU2TOYS FOR WOMANS

User manual



CONTROL

- 1) The lower part of the dilator serves as a cover for the battery.
- 2) To turn on the dilator, remove the battery cover, insert 3 LR44 batteries and the cover screw them back on.
- 3) You change the individual vibration rhythms by briefly pressing the button on the battery cover.

MAINTENANCE

After each use, rinse the dilator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The dilator **is not waterproof or water resistant!**

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by three LR44 batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Dilator and 3 LR44 batteries.