

Please keep away from direct sunlight and store in a cool, dry place Not doing so may cause defects, overheating and fire hazards. Please do not store with insecticides, solvents, products with strong scents such as perfumes or air fresheners, silicone items, or oil-based products. • Always turn product OFF after use to prevent accidents or injury.

#### How To Clean

- Please wash with tepid water
- If using soap, please use a mild, neutral soap
- After washing, please dry with a soft towel
- Do not submerge or boil the product
- Please do not use acidic, alkaline substances, alcohol or hot water when washing the product. This may cause disfiguration of the shape and color of the product.

### Changing Battery

The included battery is to see if the product works. For proper use please replace battery upon first use. When changing battery, please turn the product OFF. Battery life may fluctuate depending on situation and frequency of use. %If the product stops working for reasons other than defect, or the vibrations seem dull, please change the battery [How to Change Batteries]

2 Reattach Battery Cover and twist clockwise to close.

Product Specifications			
Product Name and Code	iroha pleasure item stick coral × gray / HMS-01 iroha pleasure item stick lilac × black / HMS-03 iroha pleasure item stick light pink × white / HMS-04		
Running Time / Waterproofing		Approx 5 Hours / Waterproof up to 50cm(20")	
Product Size / Weight		22×22×99mm / 44g	
Materials	Silicone, PC, Includes AAA Alkaline Tester Battery		
MADE IN CHINA			

#### Regarding water-resistance

This product is designed to be waterproof, but improper use may compromise water-tightness. • Exposure to strong currents of water or depths of over 50cm can compromise water-tightness and lead to product damage. 
Please do not get hair, dirt or other substances trapped inside the Water-resistance Packing. These will cause an opening for water to enter the product. Please ensure not to damage the Water-resistance Packing when changing battery. 
Please make sure to check the Water-resistance Packing for damage to prevent the possibility of water entering the product.

#### Safety Information

OWash before first use and after every use. ODo not expose to water if the product is loose or the battery compartment is exposed. Avoid use in hot and humid places or in salt water or seawater. This may cause damage to the product. Please do not submerge the product for prolonged periods of time, or boil the product. OD not use on any areas of the body that are irritated, inflamed or otherwise damaged. Please do not use acidic, alkaline substances, alcohol or hot water when washing the product. This may cause disfiguration of the shape and color of the product. OD not use the product in the following circumstances:- When extremely tired.- When under the influence of alcohol. 
Please do not drop or expose product to extreme forces. This may cause electrical short circuiting or defects. 
If the second seco you feel any physical abnormalities during use of the product, please cease use immediately and seek medical attention. If you find any damages or defect with the product, please case use immediately and turn the power OFF. Use of damaged product may cause injury. To prevent transfer of STIs, do not share. Please do not use near open fiames or cigarettes. This may cause fire hazards. @Do not use on same area of body for over 15 minutes. Use only water-based lubricants with this product.

# WARNING

Do not attempt to deconstruct, modify, or fix the item yourself. This may cause fire hazards or injuries. Those with pacemakers or other electronic medical devices, who are pregnant, or are otherwise currently receiving medical treatment, please discuss use of this item with a medical professional before use. OKeep out of reach of children. Product contains small parts that may be accidentally swallowed.

## Regarding Battery

Please use only Alkaline AAA batteries with this product. Non-alkaline batteries may cause extreme shortening of running time. •Always read safety information of the battery. OD not expose battery to fire, short circuit battery or attempt to deconstruct the battery. OD not expose battery to water. Always ensure positive and negative ends of the battery. Remove dead batteries immediately. If you are not using the product for a prolonged period of time, remove battery. If you are exposed to liquid from the battery, please wash area exposed and seek medical attention.

Product Warranty			
Name:			
Address:			
Telephone Number:			
Warranty Period:	3 Months		
Date of Purchase:			
Place of Purchase: (Name of Store, Address, Telephone Number) Attach Receipt			

Product Warranty covers working parts of the Product and does NOT cover the following

If you fail to show both this User Manual and Original Purchase Receipt.

 Abnormal usage methods, or usage methods deemed inappropriate or otherwise mentioned as invalidating Warranty in this User Manual.
 Damages made during delivery of product, moving of product or accidental damages.

Damages caused by natural disasters.
 Cosmetic damage due to fair use of Product.

For warranty inquiries please contact: global@tenga.co.jp iroha-tenga.com/en

