

# Vibrator SILVER BULLET

## **Instructions for use:**

1. Turn the dial wheel (towards the right) located on the bottom of the vibrator, which is also the battery cover, to put the vibrator into operation.
2. The bottom base of the vibrator also serves as a stepless vibration control (Low - lowest vibration, High - highest vibration).
3. Turn the dial wheel (towards the left) to turn the vibrator off.

## **Maintenance:**

Wash the vibrator with water and antibacterial soap. For a more thorough cleaning, use a cleaner designed for silicone erotic toys.

**CAUTION:** Water must not get into the lower battery cover as the vibrator is not waterproof.

## **Storage:**

Store separately from other erotic toys in a dry and dark place.

## **Lubrication:**

Use only water and silicone based lubricants. Other lubricating gels could damage the surface of the toy!

## **Power supply:**

The vibrator is powered by two type C UM2 batteries (R14/1.5V).

## **Package contents:**

Vibrator