

SMILE MAKERS THE ARTIST VIBRATOR

User manual



CONTROL

- 1) To activate and deactivate the button lock, hold down the smaller round button for 5 seconds and the LED will flash.
- 2) Subsequent short presses of the larger round button will turn it on and change the individual vibration and pulsation rhythms of the vibrator arm.
- 3) Short presses of the smaller button turn on and change the individual vibration and pulsation rhythms of the clitoral stimulator.
- 4) Turn it off by holding the smaller button for 3 seconds.

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.

The product can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

Charging takes approximately 150 minutes.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Included in the package you will find the vibrator, a USB cable for charging and a velvet pouch for storing your tools.