 




MADE BY ZEN[®]

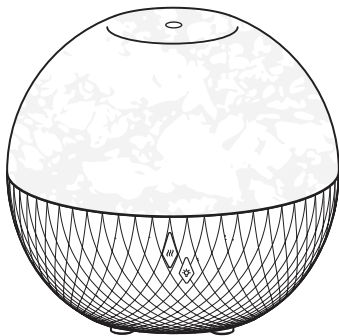

SELENE

Cosmic designed Aroma Diffuser with a moon like glow and soft ambient lighting

TABLE OF CONTENTS:

A. ABOUT THE SELENE

B. TECHNICAL SPECIFICATION

C. OPERATING INSTRUCTIONS

D. FEATURES

E. MAINTENANCE

F. TROUBLESHOOTING

G. WARRANTY

Congratulations on purchasing your MADE BY ZEN® Selene Aroma Diffuser. Please keep this manual to help you get the most out of your Selene and for maintenance.



ABOUT THE SELENE

Selene, named after the Goddess of the moon, is a modern ultrasonic aroma diffuser which complements any décor. Selene's soft warm light and fragrance diffusion ensures that you are lulled into a blissfully relaxed state of mind.

Achieving the perfect balance of aesthetics, simplicity and functionality, Selene adds sophisticated elegance to your space. It creates a calm, serene space and an inviting atmosphere for unwinding or socialising.

Using state of the art technology and modern design, Selene adds a touch of luxury to any home with its subtle light, plume of divine fragrance and humidifying mist.

Warm, ambient LED lighting with a variety of settings which help you to relax.



- Breathing light, can be used to aid mindful meditation
- Soft glow, fixed ambient light
- Sleep mode (no light) option



Suitable for use with any essential or fragrance oils
(MADE BY ZEN® oils recommended).



High and low mist intensity settings. Ideal for diffusing stronger scents or getting a strong burst of fragrance or humidity into the air.

Thank you for purchasing the MADE BY ZEN® Selene Aroma Diffuser.



TECHNICAL SPECIFICATIONS

Model Name: Selene Aroma Diffuser

Model No: EW050

Product Size: $\Phi 146 \times 129\text{mm}$

Voltage: DC 24V

Power: 15W

Water Capacity: 220ml

Run Time: Around 6 hours (high mist mode).
Around 10 hours (low mist mode).

01. Mist Outlet

02. Cover

03. Max. Water Level Line

04. Water Tank

05. Vent Hole

06. Ceramic Disc

 
07. Water Discharge Indicator

08. Mist Button

09. Light Button

10. DC Jack

11. Adapter

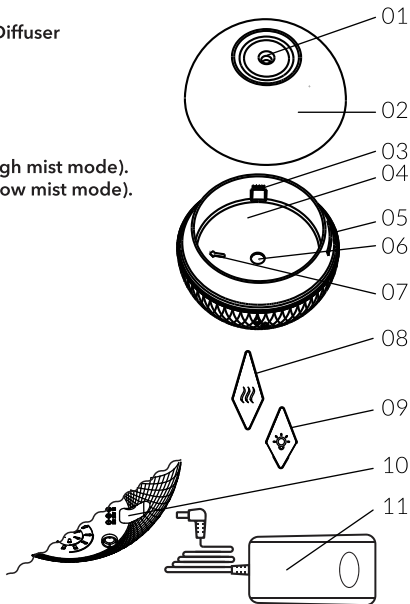

IMPORTANT NOTES BEFORE

1. Place the Aroma Diffuser on a flat surface, at least 60cm away from the floor and at least 10cm away from the wall. DO NOT place the Aroma Diffuser on wooden or polished furniture that may be damaged by water moisture.
2. Always unplug the Aroma Diffuser from the mains electrical supply when cleaning or filling with water. Always use the power adaptor supplied. Ensure the cable is secure to avoid tripping or knocking over the Aroma Diffuser. If the power adaptor is damaged, it must be replaced with a suitable adaptor provided by the manufacturer or its agent. Alternatively, a new adaptor can be purchased from your retailer.
3. Use a suitable measuring cup to fill the water into the Water Tank. Never attempt to fill water under a running tap or whilst plugged in. Do not fill the water beyond the Max Water Level Line. If overfilled, carefully remove the excess water from the water tank in the direction of the arrow shown by the Water Discharge Indicator onto the drainage side – away from the Vent Hole.
4. The Aroma Diffuser must be kept out of reach from children and pets to avoid risk of injury. Children should be supervised at all times to ensure they do not play with the appliance.
5. The Aroma Diffuser is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. Keep the Aroma Diffuser in a clear space to allow the mist to freely spread and away from appliances especially those sensitive to water to avoid unnecessary accidents.
7. The Aroma Diffuser must be kept clean and dry when not in use. Never leave stagnant oil and water in the Water Tank for prolonged periods.

8. Never attempt to disassemble your Aroma Diffuser or repair the product, as this will void your warranty and create a shock hazard. Contact your retailer if an internal inspection is required.

9. In case of abnormal observations such as smoke, peculiar smells or noise, stop using the Aroma Diffuser immediately and contact the retailer from where you purchased it. Never wrap the adaptor or diffuser with cloth or paper as blocking ventilation could increase the risk of fire.

10. Always handle the Aroma Diffuser with care - accidental damage is not covered under the warranty.

11. Always use water at room temperature and use only fresh, clean water from a reliable source. Do not fill the water tank with other chemicals or liquids other than water and a few drops of fragrance or essential oils.

12. Never touch the water within the water tank when the diffuser is in operation as the water may become warm. It is perfectly normal for the water temperature to increase over time. Especially if it has been running for a few hours. This is caused by the energy created from the vibrating disc. The water should not exceed 40°C but for some models it can increase to 50°C (+/- 5°C). However, as the mist dissipates from the mist outlet, the water temperature cools rapidly due to the large surface area of each droplet, hence the mist is referred to as a 'cool mist'.

13. Always plug the adaptor into the DC Jack before plugging into the mains.

14. Do not remove the cover during operation.

 
15. NEVER touch the ultrasonic ceramic disc while the diffuser is plugged in as this could cause serious injury.

16. Do not immerse the unit in water or other liquids and do not attempt to clean in a dishwasher.


17. When using the light only mode, the auto shut off will not operate. Switch off the light as per the instructions.



OPERATING INSTRUCTIONS

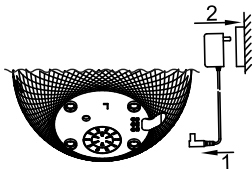


 1. Connect the adaptor jack to the DC Jack at the back of the unit. Plug the adapter into the mains.

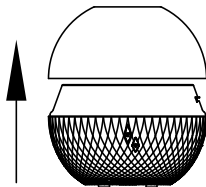

2. Place the diffuser on a firm and flat surface, in upright direction. Remove the cover upward carefully as shown.

 
**DO NOT EXCEED THE MAX.
WATER LEVEL INDICATOR**

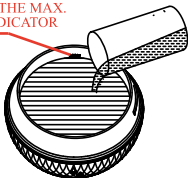


3. Add fresh tap water to the Water Tank using a suitable filling cup, to the Max Level Line.



 4. Add 3-5 drops of your favourite Fragrance or Essential Oil into the water (MADE BY ZEN® oils recommended).

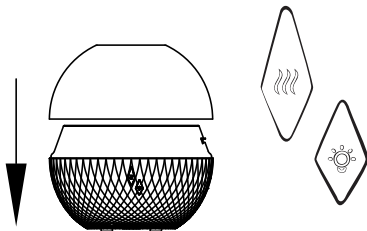

 5. Replace the cover. Switch on the Aroma Diffuser. Press the  button to turn on the mist. Press the  button to turn on the light.

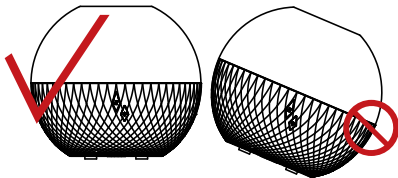

Note: Do not lean or move or attempt to empty or refill the diffuser during operation.

BUTTON FUNCTIONS

MIST CONTROL:

> **Press the MIST button**  once to operate the mist function. The Selene will operate with the high intensity mist mode.

> **Press the MIST button**  twice to reduce the intensity of the mist to the low mist mode. As there is mist built up within the Water Tank chamber, it may take several seconds to notice the reduction in mist.

> **Press the MIST button**  three times to turn off the mist function. The LED lights will flash three times, to indicate the mist function is now off. As there is mist built up within the Water Tank chamber, it may take several seconds for the mist to stop emitting from the Mist Outlet.

> **Press the MIST button**  continuously for a few seconds at any time during operation to turn off the mist. The Mist Off function is indicated when the LED lights flash three times.

BUTTON FUNCTIONS

LIGHT CONTROL:

>**Press the LIGHT button**  once to switch on the light function. The Selene will operate with the breathing light mode (where the intensity of the LED light fades and then brightens gradually).

>**Press the LIGHT button**  twice to fix the intensity at your preferred level of brightness.

>**Press the LIGHT button**  three times to turn off the light mode. Please note that the mist and light modes operate independently. This allows you to switch off the light whilst the unit is still misting; ideal for night time use.

Please note the auto-shut off will only operate when the mist function is being used. During the light only mode, you will have to manually switch off the light by pressing the LIGHT  button, three times.



FEATURES

 
The Selene Ultrasonic Aroma Diffuser provides a revolutionary way to fragrance your surroundings. It works by creating high frequency vibrations that breaks down the water and oil into minute particles which are then effectively diffused into the immediate surroundings.

- Aroma Diffuser: Can be used with or without the light, ideal for night-time use.
- Night Lamp: Can be used without the mist, ideal as a night light.
- Unique patented design.
- Low energy LED lights.
- Mini humidifier.
- Quiet operation.
- Auto-shut off when water runs out for an additional safety.
- Easy to clean and use.


Note: Auto shut off does not operate when using light only mode.



MAINTENANCE

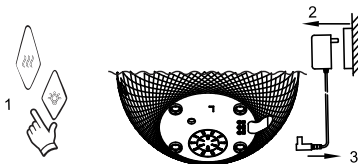


 1. Press the MIST and LIGHT button to switch off the unit and unplug the power adaptor from the mains.

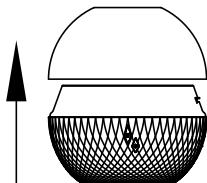


2. Remove the cover.

 WARNING:
REMOVE WATER IN THE
DIRECTION OF THE
WATER DISCHARGE
INDICATOR ARROW.
DO NOT EMPTY WATER
FROM THE SIDE OF THE VENT
HOLE AS WATER MAY ENTER
INTO THE UNIT.

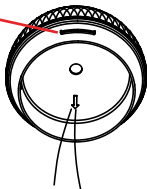

 3. Empty water in the direction of the Water Discharge Indicator arrow.

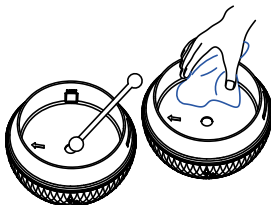

4. Use a clean swab or cloth to clean the unit.

Caution: Always switch off the appliance and disconnect the power source from electrical outlet before cleaning.

Always keep your Aroma Diffuser clean and dry when not in use.

Never leave stagnant oil and water inside the water tank for prolonged periods.

For stubborn oil build up, use sanitary alcohol on a cotton bud if required.

If the Aroma Diffuser does not generate mist (or generates little mist), clean the ceramic disc.

When cleaning, always take extra care to ensure water does not enter DC Jack power port. Allow the unit to dry thoroughly as advised below if water accidentally enters the electrical port.

Accidental Leakage: In the event of the aroma diffuser being knocked over during use, please follow the steps below to avoid malfunction.

- Unplug the diffuser from the mains and remove the cover carefully.
- Pour out any remaining water from the tank.
- Shake the diffuser gently to drain any water from inside, then leave for 24 hours for the diffuser to dry thoroughly in a well-ventilated area.



TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or mist volume significantly reduced	Water is lower than the water level sensor.	Refill the water tank with ordinary tap water. Take care not to fill past the max water level line.
	Water is exceeding the max water level line.	Carefully pour out excess water in the direction of the Water Discharge Indicator arrow, away from the vent hole.
	There may be a build-up of oil on the ceramic disc.	Clean the ceramic disc with water and a clean cloth.
	Mist outlet is blocked.	Clean the mist outlet by thoroughly cleaning the inside of the cover with clean water.
Unit will not switch on	There is insufficient water in the reservoir.	Carefully fill the reservoir with water to the Max Water Level. Do not overfill.
	The power cable may not be connected properly.	Disconnect the adaptor and try connecting properly.
	Water may have entered the internal structure.	Follow the instructions for 'Accidental Leakage' above and try to operate the unit again.
Water is leaking from the unit	The cover is not positioned correctly.	Remove the cover and replace correctly, allowing the mist to release correctly.
	The unit has been tipped or knocked over.	Follow the instructions for 'Accidental Leakage' above and try to operate the unit again.
	The temperature is low and/or there is high humidity.	Under these conditions, mist can sometimes condense into water droplets.

The intensity and amount of mist may vary, but this is not unusual and should not be considered as a fault. Factors that may affect this include water type, humidity, temperature, air currents etc.



WARRANTY

This product carries a 12-month warranty for proper use in accordance with this manual against any manufacturing defects. Accidental damage is not covered under the warranty.

The warranty period is 12 months from the date of purchase. In case of any problems arising during the warranty period, please contact your retailer for maintenance or claims. Proof of purchase will be required, so it is vital that you keep your receipt of purchase with this safety manual.

Corrosive oils such as Citronella may cause damage to the unit if left in the water tank. This type of damage is not covered under the warranty. This Aroma Diffuser must be cleaned after each use.



IMPORTANT!

MADE BY ZEN® Ultrasonic Aroma Diffusers comply with the WEEE Directive (Waste from Electrical and Electronic Equipment Directive) 2012/19/EU.

When the Selene Aroma Diffuser reaches the end of its working life, it should not be disposed of in the normal waste stream, but at an appropriate collection point for the recycling of electrical products.

Caring for our planet is important to us, so please help us by disposing of Selene correctly. Thank you.



MADE BY ZEN®

MADEBYZEN.COM