

HOT OCTOPUSS STIMULATOR PULSE III DUO

User manual



CONTROL

- 1) Turn it on and off with the longitudinal button on the side of the device by holding it down for approximately 2 seconds.
- 2) Press it briefly to select one of the escalation modes.
- 3) In addition, you can use the other buttons marked + and - to start the vibration and here you can choose from 4 speeds.
- 4) Press and hold + to reach the "turbo function".

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **water resistant**, so maintenance is very easy. The stimulator can be splashed with water, but you **MUST NOT immerse it in water!** Waterproof means that you could completely submerge the product in water and enjoy water play. Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use. Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find the stimulator, a remote control and a magnetic USB cable for charging.