

GIO-175

innoGIO GIO star Astronaut

Children night projector

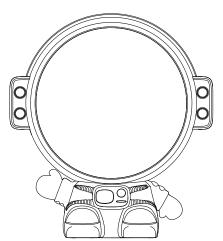

Product Manual

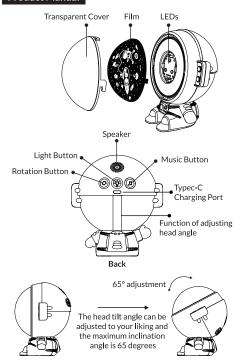

Product Features

- 1. This product is a colorful and captivating children night projector.
- 2. This product can play music, which helps create a romantic atmosphere.

Product Information

Item Name: GIOstar Astronaut - Children night projector

Item No: GIO-175

Material: ABS+PC+PVC+Electronic components

Rated Voltage: 5 V Rated Current: 1 A

Rated Power: 4.1 W Item Size: 110 x 93 x 121 mm Battery Capacity: 1200 mAh Accessory: Type-C USB Cable

How to change the light modes

Rotation Button

	When you turn on the light
Press once	The projection screen rotates clockwise
Press twice	Pause rotation

Light Button (2)

1st Press	Cold White light
2nd Press	Blue light
3rd Press	Warm yellow light
4th Press	Three color gradient
5th Press	Turn off light

 
Stepless changes of light intensity: press and hold for two seconds to change the light intensity in a stepless manner; the light brightness will increase from the initial brightness to 100%. Release the button, press and hold for two seconds again, and the light intensity will be reduced from 100% to 30%. The light has a memory function (it memorizes the most recent brightness level). Stepless changes of light intensity is not available in the three color gradient mode.

Music Button (1)


If you press the music button, the music will start playing. Press the button once to switch to a different song (there are 8 songs in total); press it for two seconds to turn off the music (you do not need to turn on the light in order to play music).

Instructions for use


- 1. The product is powered with a 5V == 1A charger. Do not use an adapter with power over 5V == 2A to charge or power the product. (The product is only equipped with a USB cable without an adapter)
- 2. Fully charge the product before using it. A red light flashes during charging. The red light stays on when the product is fully charged. It takes about 2.5 hours to fully charge the product. The charging time must not exceed 8 hours, otherwise the battery can be damaged and the product life shortened.
- 3. Depending on the selected mode of operation, a fully charged product can be used for 2-24 hours.
- 4. How to use the product:
- Press and hold the transparent night projector cover and turn it counterclockwise to dismantle it from the main body.



  Take out the film replace it with a different one and align it with the cover clasp.



  Close the transparent night projector cover, align it with the cover clasp, press and hold the transparent night projector cover. and rotate it clockwise in order to mount it.



Attention

- 1. Check the voltage of this product and its compatibility before use.
- 2. Do not expose the product to direct sunlight and do not use in settings with water mist, humidity, dirt, high temperatures, etc.
- 3. The product must not be placed into or close to the fire source to avoid any fire and explosion hazards.
- 4. Use it on the table with inclination of no more than 6 degrees to prevent it from falling.
- 5. Children under the age of 6 years old should not handle the product.
- 6. When assembling the transparent cover, attention should be paid to whether the cover is screwed in place, to avoid failures of fastening and the cover falling off.
- 7. The light source in the night projector should be replaced by the manufacturer or other agent or person with similar qualifications.
- 8. The battery should be disposed of safely. The obsolete battery should not be discarded with general waste and instead it should be placed in a special battery recycling bin.





Importer: INNOGIO sp. z o.o. Ostródzka street 74H. 03-289 Warsaw. Poland

www.innogio.com



@innoGIO.official

