

FANTASY FOR HER VIBRATING ROTO SUCK-HER



User manual

CONTROL

- 1) The bottom of the stimulator serves as a battery cover.
- 2) Remove the battery cover, insert 2 AAA batteries and screw the cover back on.
- 3) To turn on the suction function, press the "S" button for approximately 3 seconds.
- 4) Adjust the suction function and then release the air by briefly pressing the "R" button.
- 5) To switch on the vibration, press the "V" button for approx. 3 seconds.
- 6) Switch the individual vibration rhythms by briefly pressing the "V" button.

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by two AAA batteries.

For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Stimulator.