Operating Instructions:

Rechargeable via the included USB cord.

Multi-function button and heat button can be used separately or simultaneously.

-Multi-Function Power On/Off:

Press and hold button to initiate thrusting/gyration and vibration. Press again to cycle through 7 patterns of vibration. Press and hold to turn off.

Press and hold button to turn on warming function. Press and hold to turn off.

Care Instructions:

Cleanup is a snap after the fun with antibacterial cleaner and warm water. Clear cap creates a hygienic travel/storage option when not in use.

Max. Insertable Length (extended): 4.8" (12.2 cm) Total Length: 8.4" (21.3 cm) Total Width: 1.5" (3.8 cm)

PRODUCT INFO		
0	Charge Time	2.5 hrs
	Run Time	40 min
	Charger Type	Magnetic/USB A
	Pole Distance	8 mm
	Pole Dia.	3 mm
	Modes	7

