


**Model AC127**

Baby Movement Monitor,  
with Sound

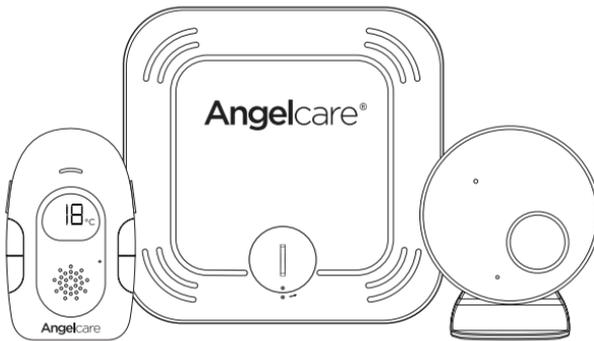

**! WARNING**

Keep user's guide for future reference. Please read the warnings and safety instructions carefully before assembling & using the product. Failure to follow the warnings and the instructions could result in serious injury or death or damage to the product.

**IMPORTANT - INTENDED USE**

This product is NOT intended and should NOT be used to prevent Sudden Infant Death Syndrome (SIDS). This product is NOT intended to diagnose, treat, mitigate, cure or prevent any disease or condition. This is a product to monitor the movement of healthy babies and is not a substitute for parental care.

This baby monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use

## **WARNINGS**

1. Because of the serious strangulation risk to infant & toddlers, parents & caregivers should note the following Warnings



### **WARNING - Strangulation Hazard – Children have STRANGLLED in cords**

- **KEEP** the Nursery Unit and adaptor cords **OUT** of the reach of children more than 3 feet or 1 metre away
- **NEVER** use extension cords with adaptors. **ONLY** use adaptors provided
- **This product is NOT a Toy. NEVER allow children to play with it**

2.

### **WARNING - MOVEMENT SENSOR PAD - NO ALARM**

- Sources of vibration & movement other than your baby's can be detected by the Sensor Pad and interfere with the performance of your Angelcare monitor
- The alarm will not sound if it detects movement other than your baby's
- High sensitivity settings can pick up other sources of vibration & movements - please read instructions on sensitivity setting to adjust accordingly
- Other active and older babies (toddlers) in the same room can be detected and the alarm will not sound
- Ensure the baby's environment is **FREE** from any movements or vibrations when using the Sensor Pad - see below warnings 3 to 11

3. DO NOT use a cot mobile and other cot accessories that may produce movements or vibrations

4. Fans (including ceiling), washing machines, floor boards, central heating or loud music are all forms of movement and vibration and may interfere and be detected by the Sensor Pad

5. If an additional Nursery Unit is added then it must be positioned at least 2 metres minimum from Nursery Unit 1 and Sensor Pad as this could interfere with performance

6. DO NOT use with bedside cot touching parent's/ carer's bed as the Sensor Pad will detect your movements

7. DO NOT place the cot against a wall or skirting board as vibrations may be detected

8. Following removal of baby from the cot, some mattresses may still detect mattress movement due to it forming back into shape and alarm may not sound

9. Ensure cot is stable to eliminate any movement

10. Cot should not be placed in reaching distance of another cot or bed

11. DO NOT use other wireless devices in the same room as the monitor (including mobile phones, microwaves...). They may interfere with signal and performance

12. **The Sensor Pad is made of plastic and does not permit air to circulate.** Therefore, mildew build up could develop underneath the mattress in the Sensor Pad area

We suggest rotating & airing /drying the mattress regularly to prevent any mildew. **AVOID CONTACT WITH MOISTURE.** Clean - wipe with a dry lint free cloth

13. **The Sensor Pad is not suitable for use above age 24 months**

14. **This product cannot replace responsible adult supervision**

- This product is designed to aid in the monitoring of your child. When using the monitor, you must still

provide the supervision necessary for the continued safety of your child

- Use this appliance **ONLY** for its intended use as described in this manual
- 15. The Sensor Pad is not intended to be used to determine if a child is out of the cot**
  - 16. ALWAYS be sure to immediately check on baby whenever an alarm sounds**
  - 17. Keep cords out of the reach of ANY children**
  - 18. ONLY use the chargers and power adaptors provided. Do not use other types as this may damage the device and battery pack (if included in your model)**
  - 19. Adult assembly required. Keep small parts away from children when assembling**
  - 20. Follow instructions and test this monitor and its functions so you are familiar with it prior to actual use. ALWAYS be sure that both the transmitter and receiver are working properly and are within range of each other - check periodically and when changing location of the Nursery Unit**
  - 21. DO NOT touch the plug contacts especially with sharp or metal objects**
  - 22. DO NOT use the baby monitor near water**  
Care should be taken so that objects DO NOT fall onto units and that liquids are not spilled into either unit or Sensor Pad through its openings



- 23. Keep monitor AWAY from heat sources (such as stoves, radiators, etc.).** Heat can damage the case or electrical parts
- 24. ALWAYS place both the Nursery Unit and the Parent Unit on a flat solid surface in an upright position that allows for proper VENTILATION.** DO NOT place on sofas, cushions, beds, etc. which may block ventilation or anywhere that would muffle the sound or interfere with the normal flow of air
- 25. The baby monitor can only be used between 10°C and 40°C (50°F and 104°F)**

## WARNINGS AND SAFETY INSTRUCTIONS - BATTERY SPECIFIC

- 26. ALWAYS keep all batteries away from children**
- 27. The Parent Unit batteries are replaceable Nickel-Metal-Hydrate batteries. The Wireless Sensor Pad uses a replaceable Button Cell Lithium Battery. Only use the Angelcare recommended replacement battery (see Technical Specification)**
  - Danger of explosion if the wrong battery is used or if replaced incorrectly. Refer to User's Guide for correct battery installation
  - DO NOT short circuit supply terminals
- 28. DO NOT mix old and new batteries and only**

**use Angelcare recommended replacement batteries** (see Technical Specification)

- 29. This product contains a Button Cell Battery and if swallowed can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any of the body, seek medical attention.**
  - 30. The Button Cell Battery represents a small part and a choking hazard – KEEP away from children!**
  - 31. Exercise care in handling batteries in order not to short out the batteries** with conducting materials such as rings, bracelets and keys
  - 32. Overcharging, short circuiting, reverse charging, mutilation, or incineration of batteries must be avoided** to prevent one or more of the following occurrences: release of toxic materials, release of hydrogen and/or oxygen, gas and rise in surface temperature
  - 33. DO NOT attempt to recharge batteries provided with or identified for use with this product that are not intended to be charged.** The batteries may leak corrosive electrolyte or explode
  - 34. Incorrect polarity installation of the batteries in the end product must be avoided.** Reverse insertion of batteries can cause charging, and that may result in leakage or explosion
  - 35. Remove batteries from units if you store the product over 30 days** because the batteries could leak and damage the product
  - 36. Discard 'dead' batteries as soon as possible** since 'dead' batteries are more likely to leak in a product. If a battery has leaked or vented, discard product responsibly
  - 37. DO NOT store this product, or the batteries provided with or identified for use with this product, in high-temperature & high humidity environments and avoid direct sunlight**
- ## IMPORTANT SAFETY INSTRUCTIONS
- 38. Sensor Pad –**
    - If your cot does not have a solid, stationary, completely flat, firm surface including a spring or slat base, place a hard board between the cot base and the Sensor Pad, to ensure correct operation (see specification on STEP 2)
    - The Sensor Pad functions with standard cot sprung and foam mattresses and not memory foam (partial or full), hollow frame construction mattresses and water beds. Please consult Angelcare if unsure of mattress compatibility
  - 39. This monitor uses public airwaves to transmit signals.** The Parent Unit may pick up signals or interference from other nursery monitors in your area. Your monitor may even be picked up by other households. To protect your privacy, make sure both units are turned OFF when not in use
  - 40. Power cord protection - Protect the**

**Adaptor's power cord from being walked on or pinched by furniture or other items** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items upon or against them, paying particular attention to cords and plugs, convenience receptacle, and the point where they exit from the product. The socket outlet should be installed near the equipment and should be easily accessible. Make sure to plug the adaptor to the socket outlet nearest to the equipment and that is easily accessible. To disconnect from mains, unplug the adaptor

**41. Only use attachments/accessories and replacement parts specified by the manufacturer. Any mounting of the product should follow the manufacturer's instructions**

- DO NOT position this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product
- Use ONLY the stand sold with the product
- Be sure replacement parts are supplied by Angelcare and have the same characteristics as original part. Unauthorised substitution may result in fire,

electric shock or fire

**42. Unplug this appliance during lightning storms or when not used for long periods of time**

**43. Servicing - DO NOT attempt to service this product yourself as opening or removing covers (except battery door) may expose you to dangerous voltage or other hazards**

• **Power Supply** – see Technical Specification within this guide

**44. Overloading - DO NOT overload wall outlets, extension cords or integral convenience receptacles** as this can result in a risk of fire or electric shock


**45. Nursery Unit Antenna** - The antenna used for this transmitter must be installed to provide a separation distance of at least 8" (20 cm) from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter

**46. Cleaning** - Disconnect all units before cleaning. DO NOT immerse in water any part of the monitor. Clean only with dry cloth

## SET UP REQUIREMENTS


### WHAT'S IN THE BOX

- 1 Parent Unit
- 2 Nursery Unit
- 3 Stand (for Nursery Unit)
- 4 Sensor Pad
- 5 CR2450 Battery (for Sensor Pad)
- 6 2 x AC Adaptors
- 7 2 x Rechargeable AAA Batteries (for Parent Unit)

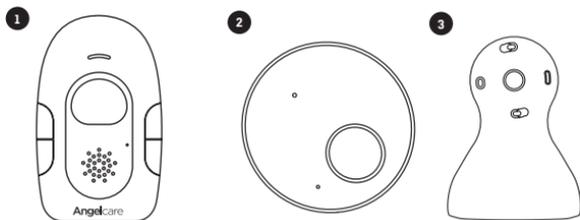


### WHAT YOU NEED

- Hardboard, if the cot does not have a firm surface (see 'IMPORTANT' note step 2)
- 2 x alkaline AAA backup batteries (for Nursery Unit)
- Posidrive screwdriver

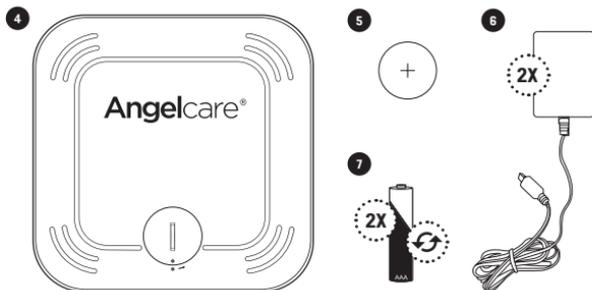


## 1- SETTING UP THE PARENT UNIT

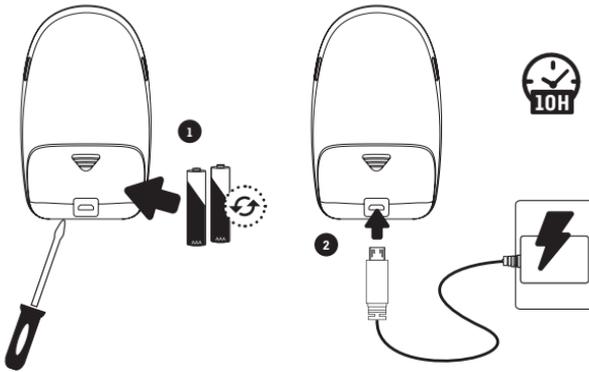


**Charge the Parent Unit  
10 hours prior to first use**  
Regular charging time is  
8 hours

## 2- SETTING UP THE SENSOR PAD


The Sensor Pad is designed to detect subtle baby movements on the surface of the mattress. The alarm will only sound if **NO** movement is detected for 20 seconds.

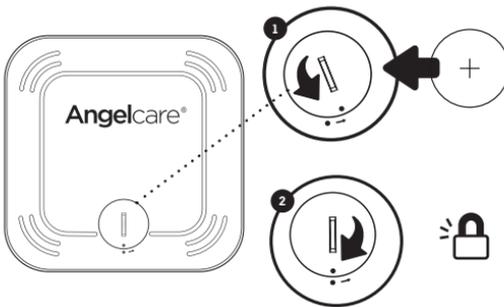

1. Remove the battery cover and insert the battery face with + face up
2. Replace the battery cover, align 2 dots and click to secure

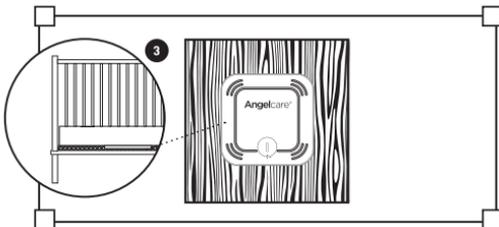


3. Remove the mattress from the cot, place Sensor Pad - **Angelcare® logo side up** - on base in approximate centre of mattress. It should be centred on the hardboard if your cot requires a hardboard support (see 'IMPORTANT' note below)
4. Replace the mattress

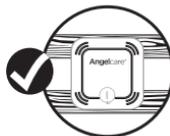


**Correct positioning  
for slatted base**

## **IMPORTANT**

- If your cot does not have a solid, stationary, completely flat, firm surface including a spring or slat base, place a hardboard between the cot base and the Sensor Pad, to ensure correct operation. The hardboard support must measure at least 30 x 30 cm (12" x 12") and 6 mm (1/4") thick. This hardboard support must be larger than the Sensor Pad surface area
- The Sensor Pad functions with standard cot sprung and foam mattresses and not memory foam (partial or full), hollow frame construction mattresses and water beds. Please consult Angelcare if unsure of mattress compatibility. The hardboard maintains a constant pressure on the Sensor Pad, enabling it to detect the baby's movements even when the baby is at the edges of the cot

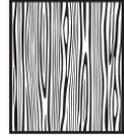


## **3-SETTING UP THE NURSERY UNIT**

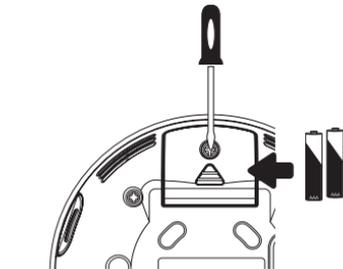

### **Note:**

- The alkaline batteries (not included) are a back-up power supply in case of power outage

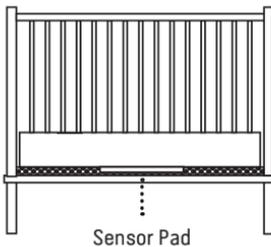


Place the Nursery Unit and Adaptor cord at least **1 metre** from the cot




## **4- TURNING ON YOUR MONITOR**

### **PARENT UNIT**

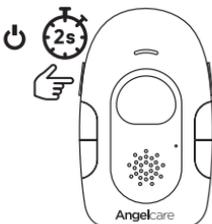


### **NURSERY UNIT**

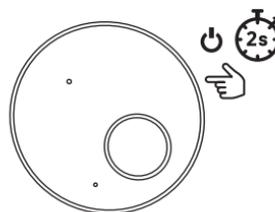

## PAUSING AND RESTARTING THE SENSOR PAD

• Allows you to pause the Sensor Pad if you remove baby from the cot, e.g. for feeding or comforting. Ensure to un-pause the Sensor Pad before putting baby in the cot

### NURSERY UNIT

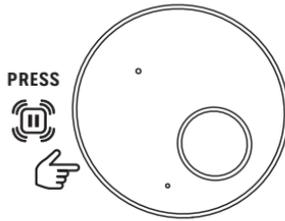

### PARENT UNIT




### Note:

- Your Nursery Unit and Parent Unit come pre-paired
- Each time you power ON your Nursery Unit, the internal thermometer will need to calibrate to ensure accuracy. This automatic process will take approximately 30 minutes
- The screen of the Parent Unit will flash the out-of-range icon until it displays the room temperature and function icons. The connection process should be done within 30 seconds. If this sequence is not completed within 30 seconds you will need to switch the units off and start again
- If you turn the Nursery Unit OFF the Out-of-Range Alarm will sound. Turn the Nursery Unit ON again to re-establish the link

## TEST THE SENSOR PAD

1. Sources of vibration & movement other than your baby's can be detected by the Sensor Pad and interfere with the performance of your Angelcare monitor. The alarm will not sound if it detects movement other than your baby's
2. There are 3 sensitivity settings – low, medium and high. The unit is set at medium (default) and can be adjusted accordingly
3. The Sensor Pad will detect false movements if you are touching the cot
4. The monitor will produce a Rouse alarm single beep tone designed to stir baby if no movement has been detected for 15 seconds. If no further movement is detected, the main alarm will sound at 20 seconds – a series of continuous beeps

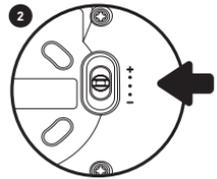

## SENSOR PAD FOUR CORNER TEST

1. Place the Sensor Pad at the approximate centre of baby's sleeping area and put the mattress back in place
2. Switch ON both Nursery & Parent Units – check both units are paired (connected)
3. Immediately pat your hand lightly and continuously on a corner of the mattress **twice** for Sensor to detect movement. If movement is detected you will hear a TIC sound every 5 seconds
4. Step away from the cot
5. The alarm will sound from the Nursery and Parent Unit after 20 seconds. If the Alarm **does not sound**, ensure everything is setup correctly and try again; check battery levels on all units, follow the manual for 'NO ALARMS' – the sensitivity setting may require lowering by a single level due to other vibrations/movements.
6. If the alarm sounds, pat your hand lightly on a corner of mattress **twice** for Sensor to detect movement. It may take up to 8 seconds to recognise movement and for alarm to stop.
7. If the alarm continues, even after lightly patting the corner of your mattress twice, adjust the sensitivity higher and repeat this test




# ! IMPORTANT

- Test your monitor before first use
- Prior to use and on a regular basis (before placing your child in the cot) always check the Sensor Pad is detecting no movements or vibrations in its environment
- Test your monitor every time you move the Sensor Pad to a different place

## 5- GETTING TO KNOW YOUR MONITOR

### NURSERY UNIT

- 1 Power indicator / Low battery light indicator
- 2 Microphone
- 3 Movement Sensor Pad indicator / Temperature indicator
- 4 Temperature indicator light ON/OFF Allows you to turn OFF LED ring light. / Pager (press & hold) Allows you to locate the Parent Unit.
- 5 Speaker
- 6 **Power ON/OFF**
- 7 Micro USB port
- 8 Movement Sensor Pad sensitivity switch
- 9 Pause Movement Sensor Pad
- 10 Battery compartment

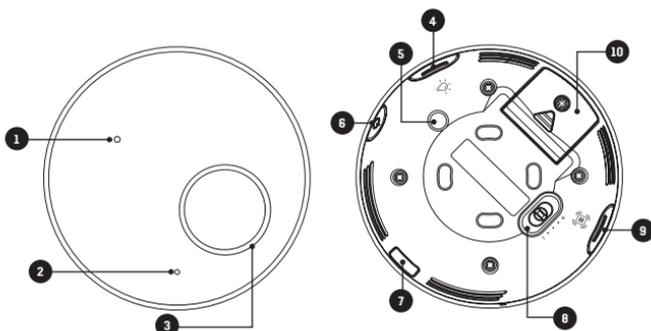


FRONT SIDE

REAR SIDE


### PARENT UNIT

- 1 Movement detection indicator (TIC)
- 2 **Power ON/OFF**
- 3 Menu (press and hold) / Exit menu
- 4 Confirm selection or change function / Pause Sensor Pad (press & hold)
- 5 Talk back button (press and hold to talk)
- 6 Volume + / UP
- 7 Volume - (In MUTE the sound icon will flash and Parent Unit will display L0) / Down
- 8 Rechargeable battery compartment
- 9 Micro USB charging port

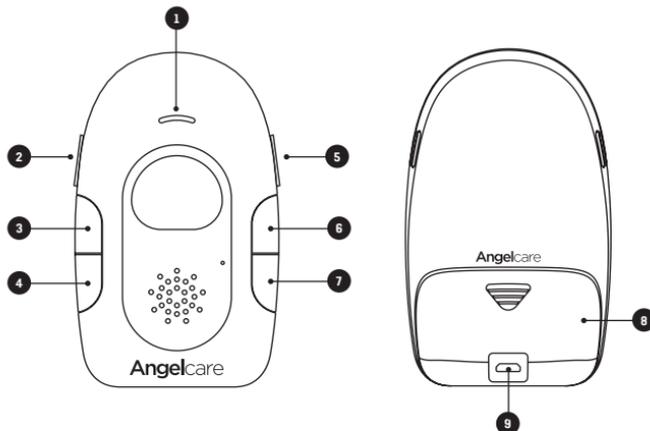

## PARENT UNIT SCREEN ICONS

- 1 Temperature display
- 2 Temperature alerts
- 3 Detection mode indicators
- 4 Visual sound indicator
- 5 Reception quality indicator
- 6 Parent Unit battery level indicator
- 7 VOX mode indicator
- 8 Celsius or Fahrenheit display

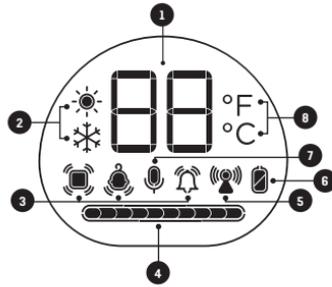

## MONITOR'S FUNCTIONS



### Note:

- The settings are accessed by pressing and holding the MENU button  on the Parent Unit
- The MENU functions are in a loop. Each time you press the OK button briefly you move on to the next menu function

### Activate/Deactivate movement detection



The Sensor Pad will alarm if there is no movement after 20 seconds. If after 20 seconds there is NO movement detected, both the Parent and Nursery Units speakers will emit loud consecutive beeps - this is the movement alarm

When your baby gets older, allows you to turn movement detection OFF and use your monitor for sound only



### Activate/Deactivate TIC function

If movement detection is activated, allows you to hear a Tic sound every 5 seconds



### Activate/Deactivate sound (nursery transmission)

Allows you to use your monitor for movement detection only



### Set VOX function

**Sound Activated (VOX ON):** Means that it will transmit sounds only when it detects them, based on the setting of the sensitivity level. To save power, after 10 seconds, the sound transmission will stop if no sound is detected. Once sound is detected transmission will automatically activate



**Continuous Sound (VOX OFF):** Means the sound monitoring is continuously ON, picking up all sounds

### Set VOX sensitivity (if VOX is activated)

The sensitivity of the microphone is adjustable (4 levels). This means that sound will only transmit based on the level that you set



### Set Celsius or Fahrenheit display

### Activate/Deactivate temperature alarm

Alerts when the temperature reaches the maximum or minimum set temperature



**Set colder temperature alarm** (if temperature alarm is activated)




**Set warmer temperature alarm** (if temperature alarm is activated)

# ! IMPORTANT



- All changes and adjustments made in the main menu will not be saved unless you confirm them by pressing the EXIT button
- When in MENU mode, sound transmission between Parent and Nursery Units will be temporarily deactivated

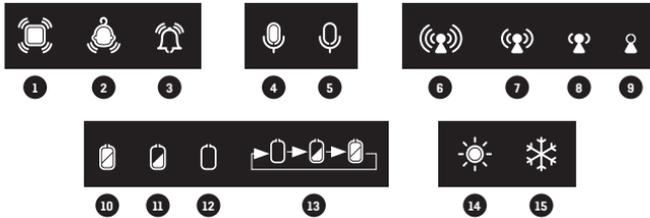

- 1 Sensor Pad movement detection is activated
  - 2 Sound is activated
  - 3 "TIC" function is activated
  - 4 Sound Activated (VOX ON) is activated
  - 5 Continuous sound (VOX OFF) is activated
- Reception quality:
- 6 Good connection
  - 7 Medium connection
  - 8 Poor connection
  - 9 Out-of-range

Parent Unit battery level indicators:

- 10 Full
- 11 1/2
- 12 Empty
- 13 Charging


Temperature alarms:

- 14 Too hot
- 15 Too cold

## 6- ALERT NOTIFICATIONS

### PARENT UNIT

- 1 **Movement alarm**
  - If NO movement is detected after 15 seconds you will hear a single 'TIC' pre-alarm sound from the Nursery Unit - this is the Rouse Alarm
  - If after a further 5 seconds there is still NO movement detected both the Parent Unit and Nursery Unit speakers will emit loud consecutive beeps - this is the Movement Alarm
  - Sensor Pad Icon and sound level bar on Parent Unit will flash
- 2 **Out-of-range alarm**
  - Alarm activates when your two units are not communicating
  - The Parent Unit will emit a triple beep every 15 seconds
  - Out-of-Range Icon will flash on the screen
- 3 **Parent Unit low battery**
  - Parent Unit will emit 2 consecutive beeps, every 30 seconds and the low battery icon will flash
- 4 **Temperature alerts**
  - Parent Unit will emit 3 consecutive beeps, every 5 seconds and the temperature icon will blink (snow flakes if too cold, sun if too hot)

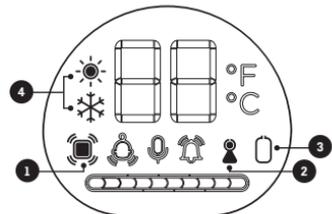

## NURSERY UNIT

### 1 Power On/Off & Low Battery Light Indicator

**Steady green:** Monitor is activated

**Flashing green:** Nursery unit is using the back-up batteries

**Flashing yellow:** Nursery Unit batteries are low

### 2 Movement Sensor Pad & Temperature Indicator

**Flashing red:** No movement is detected

· Both the Parent Unit and Nursery Unit speakers will emit loud continuous beeps - this is the Movement Alarm

**Flashing white:** Monitor is paused

· Both the Parent Unit and Nursery Unit emit a single beep every 20 seconds

**Flashing light blue:** Loss of connectivity between the Nursery unit and the Sensor Pad

· Both the Parent Unit and Nursery Unit speakers will emit loud continuous beeps


**Steady Red:** Room temperature is too hot

· The Parent Unit will emit 3 consecutive beeps every 5 seconds

**Steady Blue:** Room temperature is too cold

· The Parent Unit will emit 3 consecutive beeps every 5 seconds

**Steady White:** Room temperature is good

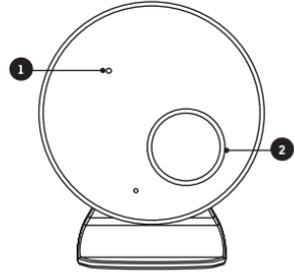

#### Note:

Press any key of the Parent Unit to stop alarm or Press the Pause Sensor Pad button of the Nursery Unit

In the case of a Sensor Pad alarm, the monitor will Pause the Sensor Pad. In Pause mode, the movement detection feature is disabled. To reactivate the movement detection, simply press any button of the Parent Unit

## 7- TROUBLESHOOTING

### TAKING CARE OF YOUR RECHARGEABLE BATTERY

- Ensure that you fully charge your batteries for 10 hours before their first use.
- To maintain maximum battery life it is recommended that you fully discharge your batteries periodically. Battery performance can be diminished by leaving the batteries constantly charging. If your Parent Unit is not in use, please turn it off.
- Inadequate battery power can impair the performance of your monitor. If you are not happy with the performance of your Parent Unit please replace the rechargeable batteries (2 x NiMH Rechargeable Batteries).
- It is advisable to change the batteries every 6 months.


### LOSS OF CONNECTIVITY BETWEEN THE PARENT UNIT AND THE NURSERY UNIT

- In the case of loss of connectivity, the first step is to bring the Parent Unit and Nursery Unit closer together and make sure that both units are ON to restore the connection. If there is still no connection and no out-of-range warning after the above has been done, then and only then should the re-connection procedure below be done.



1. Turn both Units **OFF**
2. Turn the Nursery Unit **ON**
3. Press 4 consecutive times the Power **ON/OFF** button on the Nursery Unit



The Sensor Pad Indicator Light on the Nursery Unit will flash quickly in green (indicates Nursery Unit is in linking mode)

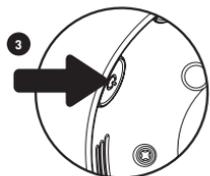

- Turn the Parent Unit **ON**. The Out-of-range icon (📶) will blink (indicates Nursery Unit is in linking mode)
- Press and hold the **Talk Back** button on the Parent Unit until a beep tone is heard
- Press **OK** button on the Parent Unit. The Out-of-Range icon (📶) should blink faster to indicate that the Parent Unit is in linking mode

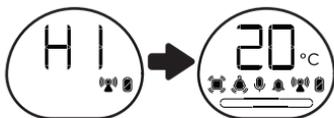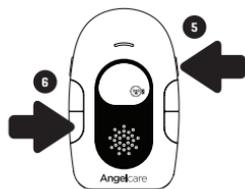


- The Parent Unit will display H1-H2 icon during the reconnection procedure
- The reconnection is successful if Parent unit shows regular screen view

## LOSS OF CONNECTIVITY BETWEEN THE SENSOR PAD AND THE NURSERY UNIT

- In the case of loss of connectivity, the first step is to bring the Sensor Pad and Nursery Unit closer together and make sure that both units are ON to restore the connection. If there is still no connection after the above has been done, then and only then should the re-connection procedure below be done. Make sure that no other wireless Sensor Pad is in the same room during the reconnection procedure.

- Turn Nursery and Parent Units OFF
- Remove and replace the battery from the Sensor Pad
- Turn the Nursery Unit ON by pressing 2 seconds on the Power ON/OFF button

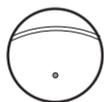


Power Indication of the Nursery Unit will turn green

- Press and hold the Pause button on the Nursery Unit for 3 seconds



The Sensor Pad indicator Light of the Nursery Unit will flash blue

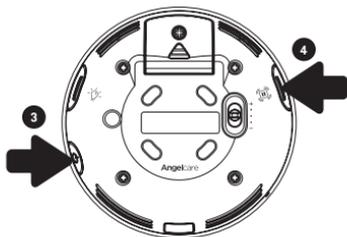

- The reconnection should be completed within 30 seconds.
- The reconnection is successful when Nursery Unit sounds a confirmation tone.

## MOVEMENT SENSOR PAD - NO ALARM

- Sources of vibration & movement other than your baby's can be detected by the Sensor Pad and the alarm will not sound.
- Refer to Warnings 3 to 11 and see STEP 4, TEST THE SENSOR PAD.

## MOVEMENT SENSOR PAD - FALSE ALARMS (SENSOR PAD LIGHT INDICATOR FLASHING RED)

- Replace the Sensor Pad battery CR2450.
- Turn OFF the Nursery Unit.
- Sensor Pad False alarms may happen for several reasons, always be sure to immediately check on baby whenever an alarm sounds:
  - Nursery Unit has not been turned OFF after you have removed your baby from the cot
  - Make sure there is no bedding between the mattress and the Sensor Pad
  - Sensor Pad has not been placed under the mattress properly. Be sure the Sensor Pad is on a flat, firm surface with the printed side facing up
  - The sensitivity level may also need to be adjusted
- Refer to Warnings 3 to 11 and see STEP 4, TEST THE SENSOR PAD

**NURSERY UNIT POWER ON INDICATOR (GREEN LIGHT) DOES NOT LIGHT UP**

- Check connections or change to another electrical outlet.
- Press the Nursery Unit ON/OFF button for 2 seconds to turn the Nursery Unit ON.

**WEAK RECEPTION**

- Bring units closer together.
- Change the position of one or both units.
- Place units on a flat surface away from baby's reach.
- Replace the batteries or recharge the Parent Unit.

**IF YOU HEAR NO SOUND**

- Check that both units are powered ON.
- Check that both units are plugged into functioning electrical outlets.
- Check the batteries in both units (replace or recharge them if necessary).
- Bring the Parent Unit closer to the Nursery Unit.

**STATIC, DISTORTION, INTERFERENCES (FROM OTHER MONITORS, WIRELESS PHONES, WALKIE-TALKIES, ETC...)**

- Rotate the Parent Unit or move it away from source of interference.

**FEEDBACK (LOUD NOISES EMITTED FROM THE PARENT UNIT)**

- Move units further apart (at least 3 metres apart).
- Decrease volume on the Parent Unit.

**THE PARENT UNIT SCREEN IS BLACK (PARENT UNIT IS OFF)**

- Turn the Parent Unit back ON by pushing and holding the power button.
- Replace the batteries or recharge the Parent Unit.

**NO POWER**

- Check or replace batteries.
- Make sure Monitor is ON.

## CUSTOMER CARE - LIMITED WARRANTY

Angelcare® warrants to the original owner of this product that Angelcare® monitor is free from any material and workmanship defects for the term of the warranty period (see warranty table below to determine the warranty for your country). If this monitoring system fails to function properly when used as directed under normal conditions and during the warranty period, Angelcare® will either repair or replace the product, at our discretion, free of charge. Please contact your local distributor to validate warranty and warranty period.

The product must be accompanied by a proof of purchase, either a bill of sale or other proof that the monitoring system is within the warranty period. Angelcare® will bear the cost of repairing or replacing the product and shipping it back to you.

**This warranty does not apply to a product which has been damaged as a result of improper maintenance, an accident, improper voltage supply or any other form of misuse. The warranty is also void if the owner repairs or modifies the product in any way. Angelcare® is not liable for any incidental or consequential damages with regard to this product. The warranty also excludes any liability other than what is stated above. No other warranty is given.**

This warranty does not cover products and accessories which are not Angelcare-branded, or any problems that result from usage that is not in accordance with product instructions, failure to follow the product instructions, or problems caused by using accessories, parts or components not supplied by Angelcare.

LEGAL RIGHTS VARY FROM COUNTRY TO COUNTRY. SOME COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. WE ARE NOT IN ANY WAY RESPONSIBLE FOR ANY OUTCOME RESULTING FROM THE USE OF THIS PRODUCT.

**IMPORTANT!** This Angelcare® monitor monitor is a personal care product. Please do not return this product to the store. If you have questions or need help, please call your distributor before returning this product.

Please contact your local distributor for warranty information. Find your local distributor by visiting our website: <https://international.angelcarebaby.com/>

Warranty term per country	
UK, South Africa, Russia	1 year
Other countries	2 years

## TECHNICAL SPECIFICATIONS

### Range:

Open field (Open area without obstructions):

- Between the Nursery Unit and the Parent Unit: up to 250 metres.
- Between the Nursery Unit and the Sensor Pad: up to 6 metres.

### Thermometer Guidelines:

High Temperature Alarm: 22°C

Low Temperature Alarm: 16°C

### Power Supply:

2 AAA alkaline batteries (not included) or 100-240 V AC / 5V DC 0.6A Adapters for the Nursery Unit.

2 AAA rechargeable batteries and 100-240 V AC / 5V DC 0.6A Adapters for the Parent Unit.

1 included CR2450 3V battery (wireless Sensor Pad)

**Caution:** To reduce the risk of electric shock, do not expose this product to rain or moisture.

Danger of explosion if batteries are incorrectly replaced. The battery included for the Parent Unit is a user replaceable Li-ion rechargeable battery. Only use the Angelcare recommended replacement battery. To obtain information on replacement batteries please contact Angelcare customer service: [www.angelcarebaby.com](http://www.angelcarebaby.com) or contact your local distributor.

Instructions will be included with the replacement battery. Keep all batteries away from children.

### Batteries:

- DO NOT mix alkaline standard (carbon-zinc), or rechargeable (NI-CD, NIMH, etc.) batteries.
- CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE

### ErP Compliance

USE ONLY THE FOLLOWING ANGELCARE® BRAND POWER SUPPLY MODEL NUMBERS:

EUROPEAN UNION (INCLUDING GERMANY) –

K05S050060G

UK - K05S050060B

### Transmission:

Transmission between the Parent Unit and the Nursery Unit is made on 1.8 GHz frequency for Europe/Asia/Africa/Australia.

Transmission between the Nursery Unit and the Sensor Pad is made on 2.4 GHz frequency for Europe/Asia/Africa/Australia

Maximum RF Power Transmitted:

- 24dBm (250mW) between Nursery Unit and Parent Unit
- 4dBm (2.5mW) between Nursery Unit and Sensor Pad
- RF Channel no. between Nursery Unit and Parent Unit: 5
- RF Channel no. between Nursery Unit and Sensor Pad: 79

Hereby, Angelcare Monitors Inc., declares that this Baby Monitor is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://angelcarebaby.com/declaration-of-conformity>

**RF Exposure** - This device is designed and manufactured to comply with Radio Frequency (RF) radiation exposure limits for EU for an uncontrolled environment. To maintain the compliance, human exposure to the nursery unit shall not be less than 20 cm during normal operation.

### PROTECT THE ENVIRONMENT

The wheellie bin symbols mean that according to local laws and regulations your product and/or its battery shall be disposed of separately from household waste. When the product/battery reaches its end of life take it to a collection point designated by local authorities. The separate disposal and recycling will help conserve natural resources and protect human health and the environment. Refer to User's Guide for removal of batteries.

See product for compliance marks specific to this device.



## Contact information

**IMPORTANT!** This Angelcare® monitor is a personal care product. Please do not return this product to the store. If you have questions or need help, please call your distributor before returning this product.

**We, at Angelcare®, stand behind all of our products. If you are not completely satisfied or have any questions, please contact your distributor before returning this product:**

**United States and Canada:** Please contact us at: [info@angelcarebaby.com](mailto:info@angelcarebaby.com)

**Other countries:** Find your local distributor by visiting our website:  
[angelcarebaby.com/distributors](http://angelcarebaby.com/distributors)

## TO LEARN MORE

To learn more, watch the **set-up videos** and other functionalities on our website.

<https://angelcare.zendesk.com/hc/>

---

**[www.angelcarebaby.com](http://www.angelcarebaby.com)**

**Angelcare Monitors Inc.**

201, boulevard de l'Industrie, local 104  
Candiac (Quebec) J5R 6A6  
Canada