

# PRETTY LOVE ELEMENTAL VIBRATOR

## User manual



### CONTROL

- 1) There are only two buttons on the handle of the vibrator.
- 2) A short press of the "power" button turns the toy on and off.
- 3) Press the button with the „wave“ symbol to switch between the different programs.

### MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.