PRETTY LOVE SNAPPY ALVIS VIBRATOR

User manual



CONTROL

- 1) There are only two buttons on the handle of the vibrator.
- 2) A short press of the "power" button turns the toy on and off.
- 3) Press the button with the wave symbol to switch between the different programs.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an erotic cleaner, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is water resistant, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!** You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only water-based lubricants. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.