

Oclean
Product User Manual



Oclean Delicate Care Kids Brush Head



Instruction

- Before brushing, insert the brush head vertically and do not rotate it from side to side.
- During brushing, make sure the bristles are at 45° to the gum line and slowly move the toothbrush without manually brushing up and down.
- After brushing, vertically pull the brush head out and rinse it.
- When replacing the brush head, pull it out or insert it vertically without rotating it from side to side.
- Dentists recommend replacing the brush head every 2 to 3 months.

Safety Warning

- Cautions should be taken for people with sensitive mouths, such as: People who have just undergone oral periodontal surgery or are undergoing treatment.
- People with other symptoms in the mouth, including dentures that are not secure or persistent heavy bleeding of the gums.
- Others with sensitive and fragile oral cavity.
- These people are not recommended to use this product, and if they do, it is recommended to consult a professional dentist before use.
- Unless under the supervision and guidance of guardians, this product is not suitable for disabled persons, mentally ill persons, or persons lacking relevant experiential knowledge.