

ROTARY FACIAL CLEANSER SET

TB-14838

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and keep it for further reference.

⚠ WARNING

- The following persons should not use this appliance: pregnant women or while breastfeeding; persons with allergies; persons with facial nerve disorders; persons who have fractures or implants with metal, silicone, or plastic; persons with open wounds, chapped or swollen skin on the area of use; persons with severe skin diseases on the face.
- Verify the appliance before you start using it. Do not use this appliance if it has any damage.
- Before you start using this appliance, remove earrings, necklaces, or other accessories to avoid injuries if hair gets tangled in the appliance.
- If you feel any discomfort while using the appliance, immediately stop using it and consult a doctor.
- Do not attempt to modify, disassemble, or repair the appliance by yourself to avoid accidents.


⚠ CAUTION

- Do not share the same brush with others.
- Keep the appliance out of reach of children.
- Regularly clean the appliance and the accessories to extend its lifetime.
- This appliance is battery-operated. If you do not use the appliance for a long time, remove the batteries.

Product Specifications:

- Name: Rotary Facial Cleanser Set
- Model No.: TB-14838
- Power: 3V \approx 1.5W
- Type of Battery: AA x 2 (Not Included)
- Executive Standard: Q/XMMJ1001-2015

Product Description:

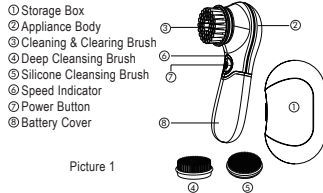

Picture 1

Facial Cleansing Brushes:


- 1) Cleaning & Clearing Brush ③
Brush with 0.055mm soft bristles made of PBT, thin and flexible bristles, effectively cleans deep down into the pores without damaging the skin.
- 2) Deep Cleansing Brush ④ (Suitable for oily skin)
Brush with 0.075mm soft, thin and slender bristles made of PBT. This brush effectively removes oil and unclogs pores.
- 3) Silicone Cleansing Brush ⑤
Brush is made of soft and skin-friendly silicone. It reduces friction on the skin, suitable for dry and sensitive skin. It is recommended to adjust the use frequency according to your skin sensitivity.

Operating Instructions:

- ※ The appliance operates off 2 AA batteries and can be used continuously for up to 90 minutes.
- 1) Install the Batteries
Remove the Battery Cover and insert 2 AA batteries according to the battery compartment indications (batteries are not included) (picture 2).
 - 2) Brush Head Replacement
Align the Brush Head with the Connection Pin and lock the position with a "click", the Brush Head is now firmly installed. To remove the Brush Head, hold it with your hand and pull it from the Appliance Body (picture 3).



Picture 2

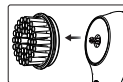

Picture 3

Daily Use:

- ※ Short press the Power Button, the bottom LED light of the Power Button lights up, and the low-speed gentle cleansing mode starts. Short press the Power Button, the top and the bottom LED light of the Power Button light up at the same time, and the high-speed vigorous cleansing mode starts.
- 1) After installing the Brush Head, apply cleansing gel to the face or Brush Head.
 - 2) Gently move the facial cleanser in a circular motion on the forehead, nose, and chin from the inside to the sides of the face (picture 4).
 - 3) After use, rinse your face with water and apply moisturizing cream.



Picture 4

Cleaning & Maintenance:

- 1) Make sure the appliance is turned off before you start cleaning it.
- 2) Do not immerse the appliance in water. The Brush Head can be cleaned separately.
- 3) Wash the surface of the appliance under tap water (do not immerse the appliance under water or in any other liquid) and dry it with a dry cloth.
- 4) Do not use any lubricant, detergent, polishing agents or air freshener on this appliance.
- 5) When cleaning the Brush Heads, do not immerse it in hot water above 40°C to avoid Brush Head deformation. Do not use corrosive liquids to clean the Brush Heads and the Body of the appliance.
- 6) After washing the Brush Head, place it in a ventilated place to dry (do not dry it in a place with direct sunlight).
- 7) It is recommended to replace the Brush Head every 3 months.

Service:

1. Eco-Friendly Tips

Batteries contain substances harmful to our environment, please do not dispose them with the normal household waste, instead, hand them over to an official recycling point.

2. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not work.	Batteries are running low or out of power.	Replace the batteries.
	Batteries were installed incorrectly.	Reinstall the batteries correctly.
Noise is too loud.	Brush head was installed incorrectly.	Follow the instructions and install the brush head correctly as guided.
Note: If the device still does not work properly after using the above solutions, please stop using the device and contact your local dealer.		

3. After-Sales Service

Please visit our website www.touchbeauty.com or contact our customer service team customer@touchbeauty.com if you need to learn about our products or if you need any information. You can also contact an affiliate dealer in your country.

MANUFACTURER: TOUCHBEAUTY BEAUTY & HEALTH (SHENZHEN) CO., LTD

ADDRESS: 601 & 602, Block F5, TCL International E-City, 1001 Zhongshanyuan Road, Shuguang Community, Xili Subdistrict, Nanshan District, Shenzhen, China.