



5 IN 1 ELECTRIC MANICURE / PEDICURE SET

TB-1039

INSTRUCTION MANUAL

### Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and keep it for future reference.


#### ⚠ WARNING

- Do not use the appliance under the following conditions: children; persons with skin allergies; on fingers or toes with skin inflammation; persons with reduced physical, sensory or mental capabilities.
- Immediately stop using the appliance, and consult a doctor if you feel unwell.
- Do not use this appliance for any other purpose than nail care.
- Do not place the appliance in hot or humid places.
- Do not attempt to modify, disassemble, or repair the appliance by yourself.

#### ⚠ CAUTION


- If you do not intend to use the appliance for a long time, please remove the batteries.

### Product Specifications:

- Name: 5 in 1 Electric Manicure / Pedicure Set
- Model No.: TB-1039
- Power: 3V  /0.54W
- Type of Battery: AAA x 2 (Not Included)
- Executive Standard: Q/XM1006-2020

### Product Description:

- ① Felt Polisher
- ② Polisher Cylinder
- ③ Cuticle Head
- ④ Nickel Grinder
- ⑤ Sandpaper Grinder
- ⑥ Power Switch
- ⑦ Battery Cover
- ⑧ Storage Case

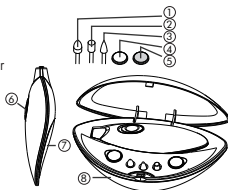

Picture 1

### How to Use:

#### 1. Preparing for Use

To ensure the correct operation of this appliance, please read the instructions carefully before use.

- ※ Remove the Battery Cover (picture 2) and insert two AAA batteries as indicated in the battery compartment (batteries not included).



Picture 2

#### 2. Using the Appliance

- 1) Select the attachment you want to use. Follow below instructions for nail care:
  - Sandpaper Grinder: Grinds thick nails to a perfect shape.
  - Cuticle Head: Can be used to remove cuticles from the sides and edges of the nail.
  - Polisher Cylinder: Ideal to use on acrylic nails, shortens and shapes the edge of the nails, can also be used in natural nails.
  - Felt Polisher: Polishes nails giving it a glossy finish.
  - Nickel Grinder: Files acrylic and natural nails with precision.
- 2) After selecting the grinding head you want to use, install it firmly into the appliance until it locks in place. Slide the Power Switch to "1" to switch on the appliance and the low speed. Slide the Power Switch to "2" to change to high speed (picture 3).
- 3) Slide the Power Switch to "0" to switch off the appliance after use.



Picture 3

### Cleaning & Maintenance:

- 1) Turn the appliance off before you start cleaning it.
- 2) Do not wash this appliance or immerse it in water. You can clean the attachments separately.
- 3) Clean the appliance body with a dry or slightly wet cloth.
- 4) Do not use water, alcohol, steel wool, abrasive cleansers, or corrosive liquids to clean the appliance.

### Service:

#### 1. Eco-Friendly Tips

Batteries contain substances harmful to our environment. Please do not dispose of the appliance with the batteries inside, remove the batteries and recycle it for environmental protection.

#### 2. Troubleshooting

Problem	Possible Cause	Solution
The appliance does not work.	The batteries are running low.	Replace the batteries as guided.
	The batteries are out of power.	
	The batteries were installed incorrectly.	
Abnormal Noise	Grinding Head was installed incorrectly.	Install the Grinding Head correctly as guided.
Other problems.		Contact your local retailer.

Note: If the appliance still does not work properly after using above solutions, please stop using the appliance and contact your local retailer.

#### After-Sales Service

If you need to learn about our products or if you need any information, please visit our website [www.touchbeauty.com](http://www.touchbeauty.com) or contact our customer service team at [customer@touchbeauty.com](mailto:customer@touchbeauty.com).

MANUFACTURER: TOUCHBEAUTY BEAUTY & HEALTH (SHENZHEN) CO., LTD  
 ADDRESS: 601 & 602, Block F5, TCL International E-City, 1001 Zhongshanyuan Road, Shuguang Community, Xili Subdistrict, Nanshan District, Shenzhen, China.