

ANAL PLUG CALEXOTICS BOOTY CALL BOOTY DOUBLE DARE



User manual

CONTROL

- 1) Insert two AAA batteries into the controller.
- 2) To turn on the vibration, turn the dial from the starting position.
- 3) The intensity is then controlled with the same dial.
- 4) To turn the vibration off, turn the dial to the starting position.

MAINTENANCE

After each use, rinse the plug with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The egg is **not waterproof or water resistant!** Plug is **waterproof!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Anal plug with vibrating egg and remote control.