

VIBRATOR CALEXOTICS

PARTY IN MY PANTS JACK RABBIT

User manual



CONTROL

- 1) Briefly press the middle power button to turn on. You are greeted by an LED backlit panel and the vibrator is ready.
- 2) Briefly press the + button to turn on the first speed of shaft and ball rotation.
- 3) Repeated short presses add speed and the - button takes it off.
- 4) Use the top button with the R/S symbol to change the direction of rotation.
- 5) Short press the bottom button with the wave symbol to switch on the vibration of the stimulator and repeated presses to change the different modes.
- 6) Turn the vibrator off again with the middle power button.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

Water resistant means that splashing water will fall on it, but you **MUST NOT submerge it in water!**

You could only immerse the product in water if it was **waterproof**.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by three AA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.