

ANAL PLUG CALEXOTICS ECLIPSE WRISTBAND REMOTE RIMMING PROBE



User manual

CONTROL

- 1) When using with the bracelet, hold the on button on the vibrator for at least 3 seconds.
- 2) To turn on the vibration and rotation, press the ON/OFF button on the bracelet.
- 3) Use the wave button to switch between vibrations.
- 4) Press the ON/OFF button to turn it off.
- 5) To turn the vibrator off, hold the on button on the base for at least 3 seconds.
- 6) If you want to use the vibrator on its own, hold the on button on the base for at least 3 seconds to turn on the vibrator.
- 7) Each additional press will move to the next vibration.
- 8) To switch off, hold the on button for at least 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. The wristband (remote control) is charged with the same cable as the vibrator.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find an anal plug, a wristband (remote control) and a USB cable for charging.