

# VIBRATING EGG PICOBONG HONI 2

## Instructions for use:

- 1) Unscrew the shaft and insert the battery with the plus pole facing out
- 2) After screwing it back in, you will find two buttons in the PicoBong brand relief
- 3) In the letter P you will find the - button and in the letter B you will find the + button
- 4) Hold the + button for 1 second to start the first vibration mode
- 5) Hold down the + button to increase the vibration intensity, hold down the - button to decrease it
- 6) To change the rhythm, hold down the + button to reach the highest level of intensity
- 7) Then hold the + button for 3 seconds and the egg will change the rhythm of the pulsation
- 8) Now you just need to change the modes with short presses
- 9) To turn the egg off, reverse the process, i.e. hold the - button for 3 seconds, which puts it into first vibration mode, and hold the - button again, which reduces the intensity of the vibration until it turns off

## Maintenance instructions

Before and after each use of the device, use a cleaner designed for erotic toys. The egg is waterproof, so maintenance is very simple and can be cleaned with water.

## Storage

Store separately from other erotic toys in a dry and dark place.

## Water resistance level

The egg is waterproof, meaning that water can splash on it, but it **MUST NOT BE DIVED INTO WATER!**

## Lubrication

Use only water-based lubricants. Other lubricating gels could damage the surface of the toy!

## Power supply:

Powered by 1 AAA battery

## Package contents:

Vibrating egg