

INSTRUCTION MANUAL

ARCO COSMETICI thanks you for having chosen the Depilation kit with roll-on applicator. Please read the following instructions carefully to enable the correct use of this product.

GENERAL SAFETY

Make sure you carefully read the instructions provided in this manual before using this product. It is recommended you retain this manual for future reference. Do not use this product for purposes other than those indicated in this instruction manual. Any other use is to be considered inappropriate and thereby dangerous. Make sure the voltage of the power supply corresponds to the one indicated on this product before using it. Do not use this product in a bathroom or other wet places. To avoid risk of electric shock, do not immerse this product in water or other solutions. Should this product fall in to water by accident, do not try to recover it. Pull the plug out immediately. NEVER use this appliance near water - i.e. when having a bath, when using the sink or with wet or moist hands. The packaging (plastic bags, boxes, paper, etc) should not be left within the reach of children as it can be potentially harmful. When storing the product, keep it far from heat sources, direct sunlight, humidity, sharp or similar objects. Periodically check the conditions of the power supply cable. Do not use the product if the socket, power supply cable or the appliance itself are damaged. Do not allow the power supply cable near or to touch hot parts of the appliance. Always unplug the appliance after every use. Do not pull the power supply cable in order turn the appliance off. Keep the appliance away from flammable objects or materials. Do not leave the appliance unattended while connected to the power supply. Do not stick any object in the appliance as it could cause damage to it. In case of faults or damage, stop using the appliance and call a specialized centre. Do not handle the product in an attempt to fix it or replace its damaged parts. All repairs must be carried out by authorized technicians, otherwise, the guarantee will not be valid. To avoid overheating, do not keep the appliance on when not in use. Let the appliance cool down before storing it. This appliance is not intended for use by persons (including children) with reduced

physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced with the special set supplied by the manufacturer or the local service agency. If the item is used in bathroom, unplug it after use since the proximity of water presents an hazard even when the item is switched off. TO AVOID THE DANGERS CAUSED BY OVERHEATING, DO NOT KEEP THE APPLIANCE SWITCHED ON UNNECESSARY WHEN NOT IN USE.

COMPONENTS

- WAX-HEATER complete with power cable.
- CARTRIDGE: 100-ml professional wax roll-on applicator for all types of skin, including even the most sensitive skin types. The roll-on head allows a thin uniform layer of wax to be applied simply and efficiently to the skin.
- PRE-CUT STRIPS: Sealed packs of 25 suitably-sized pre-cut strips for all parts of the face and body.
- AFTER-WAX one-use TOWEL: Soothing and restoring disposable wipes soaked in oil for the skin. Remove all traces of wax, leaving the skin smooth and soft to the touch.

INSTRUCTIONS FOR CORRECT USE OF THE PRODUCT

Put the cartridge inside the refill heater, insert the plug into the electric socket (always check that the voltage of the power supply corresponds to the one indicated on this product before using it) and switch on the apparatus. Cover with the lid and wait until the wax is completely melted (usually it is necessary to wait 18 to 25 minutes according to the season). Before using the cartridge always remember to take the plug out of the socket. If the wax is too hot, wait a few seconds before proceeding with the application. At the end of the operation, remove the cartridge and let the wax warmer cool down before storing it.

Warnings: do not use the product when the plug is in the power supply socket.

HOW TO USE

Make sure skin is perfectly clean and dry. Roll on the wax in the direction of hair growth and making sure that the layer of wax deposited onto the skin is uniform and that it is of the correct thickness. Apply the strip on the skin area to be depilated, pressing with the palm of your hand so that the strip adheres well. Then tear the strip against the hair growth. Keep the skin taut while pulling and pay attention in tearing in parallel way of the skin and not upright. Every strip can be used several times. After hair removal, clean the skin using afterwax one-use towel in order to remove easily wax residues.

WARNING: Never use wax on wounded, irritated or chapped skin, in case of acne or spots, on moles, varicose veins, capillary fragility, on sun burns or any similar. Unsuitable for elderly or diabetic people. Wait at least 24 hours before using any deodorant, perfume or any alcoholic lotion on the depilated area. Avoid any contact with eye, if it may happen, consult immediately a specialist. When product is used for the first time, test wax on a little part of the area to be treated and wait 24 hours before the application. Keep the product out of children reach. Keep the product upright and away from heating sources.

CLEANING AND MAINTENANCE

Before cleaning the appliance, always disconnect the plug from the main socket. In order to remove wax residues from the unit, use a soft cloth soaked in detergent afterwax oil or use the special afterwax towel provided with the products. Never use solvent or aggressive detergents. Never dip the unit into water.

TECHNICAL SPECIFICATIONS HANDLE WAX HEATER

code	power supply	capacity
050	110/240V 50Hz	45W
DE550	110/240V 50Hz	45W
088	110/240V 50-60Hz	50W
089	110/220V 50-60Hz	50W

050 Self-regulating resistance PTC, thermostat and indicator light temperature control.

DE550 Self-regulating resistance PTC.

088 Self-regulating resistance PTC and thermostat.

089 Self-regulating resistance PTC.

SYMBOLS



Class II Appliance



Do not use this appliance near bathtubs, showers, baths or other vessels containing water.



The product is made conforming with all the applicable European regulations



DISPOSAL
This appliance, including its removable parts and accessories, should be disposed separately from your household waste and in accordance with the EU directive 2002/96/EC. This equipment should be taken to a waste collection/recycling centre where there are areas designated for used electrical and electronic products. Alternatively, return it to the manufacturer when purchasing a new one. Fines may apply if the rules are breached.

All indications and drawings are based on the latest technology available at the moment of the printing. Thus, variations may be applied.

MANUEL D'INSTRUCTIONS

Merci d'avoir acheté Kit complet épilation avec applicateur. Il est conseillé de lire attentivement les instructions suivantes afin d'utiliser le produit de façon correcte.

RÈGLES DE SÉCURITÉ IMPORTANTES

Avant d'utiliser le produit, lisez attentivement les instructions contenues dans ce manuel. Il est conseillé de garder ce manuel pour référence ultérieure. N'utilisez jamais l'appareil pour des buts différents de ceux indiqués dans ce manuel d'instructions. Toute autre utilisation est considérée comme non conforme et donc dangereuse. Avant d'utiliser le produit, assurez-vous que la tension de la prise électrique correspond à celle indiquée sur le produit. N'employez pas l'appareil dans la salle de bain ni dans d'autres pièces très humides. Afin d'éviter tout choc électrique, ne plongez jamais l'appareil dans l'eau ou dans d'autres solutions liquides. Si par hasard l'appareil tombe dans l'eau, n'essayez pas de le récupérer, mais débranchez immédiatement la fiche. N'utilisez JAMAIS l'appareil à proximité de l'eau, par exemple dans la baignoire, avec les mains mouillées ou humides, si de l'eau coule dans le lavabo. Les emballages (sachets en plastique, boîtes, cartons...) ne doivent pas être laissés à la portée des enfants car ils représentent des sources potentielles de danger. Le produit doit toujours être installé et gardé loin de sources de chaleur, rayons du soleil, humidité, objets tranchants et similaires. Contrôlez périodiquement l'état du cordon d'alimentation. N'employez pas l'appareil si la fiche, le cordon d'alimentation ou l'appareil même sont endommagés. Évitez que le cordon d'alimentation n'entre en contact avec les parties brûlantes de l'appareil. Débranchez toujours le cordon d'alimentation après avoir utilisé l'appareil. Ne tirez jamais le cordon d'alimentation ou l'appareil pour débrancher la fiche de la prise de courant. Lorsque l'appareil est en marche, gardez-le loin d'objets et de matériaux inflammables. Ne laissez jamais l'appareil sans surveillance lorsqu'il est branché sur la prise de courant. N'introduisez pas d'objets dans l'appareil car il peut être endommagé. En cas de dommages ou de défauts, arrêtez immédiatement d'utiliser le produit et adressez-vous à un service après-vente agréé. Ne modifiez pas l'appareil en essayant de le réparer ou