

BLUSH M FOR MEN MASTER BLASTER MASTURBATOR



User manual

CONTROL

- 1) The front panel offers a total of 4 buttons. Hold down the bottom power button for approximately 2 seconds to turn the device on and off.
- 2) Short presses to select between the different stroking programs.
- 3) The button with the mouth symbol indicates the suction function and short presses adjust the individual modes.
- 4) Another control is the button with the wheel symbol with vibration line, which you use to select the individual vibration programmes.
- 5) The last button with the fire symbol is used to heat up the masturbator.

MAINTENANCE

After each use, rinse the masturbator sleeve with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

ATTENTION! To remove the inner sleeve, after removing the protective cap, turn the sleeve in the upper, marked part counterclockwise, it will immediately release and can be conveniently pulled out.

WATERPROOF

The product is **not water resistant or waterproof!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a masturbator and USB cable for charging.