

BLUSH M FOR MEN WHIRLWIND PRO MASTURBATOR



User manual

CONTROL

- 1) The front panel offers a total of 3 buttons. Hold the bottom "power" button for approximately 2 seconds to turn the device on and off.
- 2) The button with the "mouth" symbol indicates the suction function and by pressing it briefly you can adjust the different modes.
- 3) Press and hold for approximately 2 seconds to switch the function off.
- 4) Another control is the button with the „wheel“ symbol, which you use to select the individual rotation programs. You can also switch off this function by holding it for 2 seconds.

MAINTENANCE

After each use, rinse the masturbator sleeve with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

ATTENTION! To remove the inner sleeve, after removing the protective cap, turn the entrance at the top counterclockwise, it will immediately release and can be conveniently pulled out.

Then carefully unzip the translucent centre section and remove the inner transparent textured sleeve.

WATERPROOF

The product is **not water resistant or waterproof!** Only the masturbator sleeve is waterproof.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a masturbator and USB cable for charging.