

# VIBRATOR GLOSSY SLIM PINK

## **Instructions for use:**

- 1) At the bottom of the vibrator there is a cover for AAA batteries
- 2) Press the "power" button, located on the battery cover, to start the vibrator
- 3) Pressing the "power" button, located on the battery cover, also switches the vibrator off

## **Maintenance:**

Wash the vibrator with water and antibacterial soap. For a more thorough cleaning, use a cleaner designed for silicone erotic toys.

**WARNING:** Water must not get into the lower battery cover as the vibrator is not waterproof.

## **Storage:**

Store separately from other erotic toys in a dry and dark place.

## **Lubrication:**

Use only water and silicone based lubricants. Other lubricating gels could damage the surface of the toy!

## **Power supply:**

The vibrator is powered by two AAA batteries

## **Package contents:**

Vibrator