

# BIJOUX INDISCRETS SET INSTRUMENTS OF PLEASURE (VIBRATING CARTRIDGE)



## User manual

### CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To switch on the vibrator, remove the battery cover, insert 3 LR44 batteries (included) and screw the cover back on.
- 3) Turn the vibrator on and off with the button on the underside of the cover.

### MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The vibrator **is not waterproof or water resistant!**

### LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

### DRIVE AND CHARGING

The vibrator is powered by three LR44 batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

Vibrator.