

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: ABS Plastic & TPE Rubber  
Battery: 1000mAh  
Voltage: 3.7V  
Number of Vibrations: 7  
User time: 60 - 90 Minutes  
Sound Level: ≤60db



### CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to charge fully before first use.

Connect the USB plug into a power source and the other end of the DC charger into the toy's charging port, located at the back of the handle base, behind the control panel. Initial charge should take about 70 minutes, and subsequent charges will take about 3 hours to complete. The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of about 60db with a 1000mAh lithium battery at a voltage of 3.7V.

### INSTRUCTIONS FOR USE

This sucking, vibrating stroker is operated with a 3-button panel located on the top side of the main canister. The power button turns the toy on, and each motor is controlled by its own button.

Press the power button (bottom button) for 2 seconds to turn the toy on. The LED light will go on and all the motors will be in standby. Press this button again for 2 seconds to turn the toy off.

Once the toy is turned on with the power button, press the suction button (top button) for 1 second to engage the suction motor. The button will light up and suction will begin at its lowest speed. Press again more quickly to cycle through 7 functions in total. Press again for 2 seconds to turn off the suction motor.

Once the toy is turned on with the power button, engage the vibration motor by pressing the vibration button (middle button) for 1 second. The button will light up and vibration will begin at its lowest speed. Press again more quickly to cycle through 7 functions in total. Press again for 2 seconds to turn off the vibration motor.

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with silicone and water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with mild soap or toy cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

