

PLAYBOY EVOLVED THE THRILL VIBRATOR

User manual



CONTROL

- 1) Holding the middle button for approximately 2 seconds will turn the entire vibrator on and off.
- 2) Subsequent short presses change the individual vibration modes.
- 3) The bottom button with the curve symbol is used to control the clitoral stimulator.
- 4) The button with the tongue symbol is used to control the central oscillating part of the vibrator.
- 5) Each function offers 7 levels, which you select by short presses of the buttons shown.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is fully **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and magnetic USB cable for charging.