

# PLAYBOY EVOLVED MIX & MATCH VIBRATOR

## User manual



### CONTROL

- 1) Each part has its own separate control point. Hold it for approximately 2 seconds and the aid to turn the aid on and off.
- 2) Short presses to switch between the different programs.
- 3) There are 10 vibration and pulsation modes on both the vibrator and the penis ring.

### MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

### WATERPROOF

The product is fully **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

### DRIVE AND CHARGING

The product is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find a vibrator, vibrating penis ring and magnetic USB cable for charging.