


OhMiBod is committed to bringing you high quality technology enabled pleasure products and accessories. Before you begin enjoying Club Vibe 3.OH Hero, please take a moment to review this manual.

CLUB VIBE 3.OH HERO - WHAT'S IN THE BOX

WIRELESS MASSAGER



WIRELESS REMOTE CONTROL

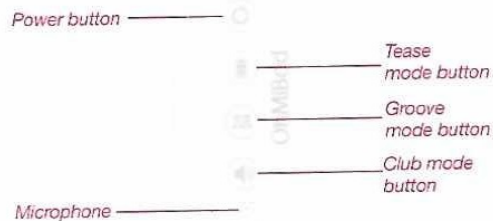


• USB charging cable

• Privacy pouch


USING CLUB VIBE 3.OH HERO

TURNING ON MASSAGER

1. Press and hold  for 3 seconds to turn on.

One short pulse will occur upon power on.

NOTE: *Blinking power button indicates vibe is ready to use.*

2. Press and hold  for 3 seconds to turn off.



Three short pulses will occur upon power off.

NOTE: *Vibe will turn off automatically after approximately 20 minutes of inactivity.*






USING CLUB VIBE 3.OH HERO

OPERATING WIRELESS REMOTE CONTROL


Press and hold  for 3 seconds to turn on.
Once on, press and hold  for 3 seconds to turn off the remote control.

TEASE MODE

Press  button quickly to send short vibration burst.
Press and hold  to send sustained vibrations.


TIP:  button can also be pressed to pause the massager when using Groove or Club modes.

GROOVE MODE

Press  to activate mode.
Press again to change to next pattern.

NOTE: 5 pre-programmed pulsations in all.

CLUB MODE:

Press  to activate sound responsive vibration
Press again to adjust the sensitivity to sound.

NOTE: 3 levels of sensitivity. Brightness of button LED indicates sensitivity level. Ex: The brighter the LED the more sensitive the built-in microphone will be to ambient sound.



CHARGING CLUB VIBE 3.OH HERO & WIRELESS REMOTE CONTROL

Simply plug the USB charging cable provided with Club Vibe 3.OH Hero into the USB port on your computer or USB wall charger adapter. Connect the other end of the cable into the charging socket on the end of Club Vibe 3.OH Hero or wireless remote control (*see diagram*). The LED will blink indicating the device is charging. (Please be sure that the massager is completely dry before charging.)

NOTE: Approximate time to reach full battery charge is 1.5 hours. LED will glow steady when fully charged.



ADDITIONAL CHARGING SAFEGUARDS

Please be sure that the massager is completely dry before charging.
Only use the charging cable provided to charge the devices.
Do not use USB charging hubs to charge the devices.
Only use with UL certified USB wall chargers.

TROUBLESHOOTING

If the LED does not blink when the product is connected to the USB cable, check to make sure the USB cable is properly connected to the USB port and Club Vibe 3.OH Hero or wireless remote control.

BATTERY DISPOSAL

Club Vibe 3.OH Hero and its remote control contain a rechargeable battery. Please do not dispose of this product with normal household waste.

Please dispose of this product at the appropriate electrical and electronic equipment recycling/disposal locations in accordance with government regulations.

The recycling of this product appropriately will help to protect our environment.

CARE & CLEANING

Club Vibe 3.OH Hero is splash proof only. When cleaning, avoid submerging in water and getting any water into the charging socket.

Clean after every use with mild soap and water. Dry thoroughly.

Store in privacy pouch to keep Club Vibe 3.OH Hero clean and safe until next use.

IMPORTANT SAFEGUARDS

- Do not use on areas that are swollen, inflamed or have skin lacerations.
- Stop using the massager if you experience pain or discomfort.
- Do not submerge in water.
- Do not use while bathing or in the shower.

SPECIFICATIONS

Club Vibe 3.OH HERO:

Materials: Body-safe silicone and ABS

Size (Vibe): 5.5" length, 1.3" width, 4.2" depth
(141 mm length, 35 mm width, 107mm depth)

Weight: 2.4 oz. (70g)

Battery: Lithium-ion, 3.7V with 100mAH

Charging: 1-1.5 hours

User time: 1+ hour of use

Wireless Remote Control: 2.4GHz