

Colgate®

COLGATE KIDS CHILDREN'S SONIC BATTERY-POWERED TOOTHBRUSH

- > Extra soft bristles gentle on gums
- > Small brush head for cleaning hard-to-reach areas
- > Narrow, easy-to-grip handle for small hands

After use, rinse the toothbrush head thoroughly, shake off excess water and store upright. Dentists and hygienists recommend replacing your toothbrush every 3 months. BRUSH HEAD IS NOT REPLACEABLE.

WARNING: Not suitable for children under 3. Adult supervision required for children under 8 and persons with disabilities. DO NOT BITE OR CHEW. For tooth brushing only, do not use it as a toy. Replace if the brush head becomes loose due to damage. Choking hazard from battery. Do not install batteries upside down, recharge them, throw them into fire, or mix them with other types of batteries. They may explode or leak and cause injury.



Includes one
AA
battery

