

VIBRATOR DREAM TOYS

VIBES OF LOVE CLIMAX BULLET



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Remove the battery cover, insert the AAA battery (not included) and screw the cover back on.
- 3) Turn on the vibrator by holding the button on the battery cover for approximately 3 seconds.
- 4) Subsequent short presses to switch between the different vibration rhythms.
- 5) Turn the vibrator off by holding the button for approx. 3 seconds.

MAINTENANCE

After each use, rinse the product with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **waterproof**, so maintenance is very easy.

It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Due to the material of the product, you can use **lubricants of any base**.

DRIVE AND CHARGING

The product is powered by AAA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.