 


QUICK START GUIDE

1. SIZE

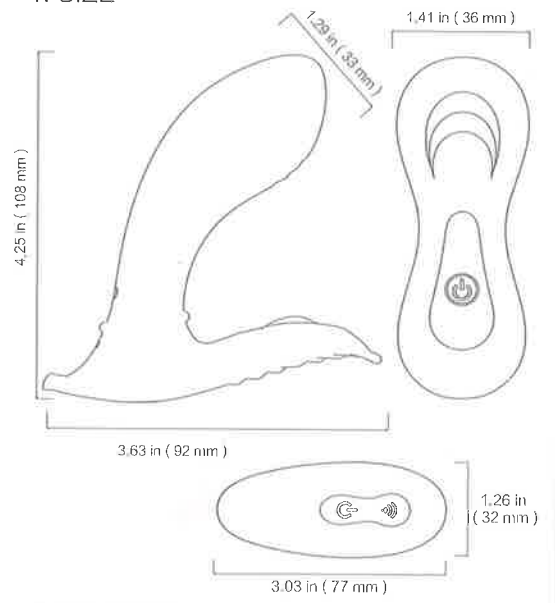

2. ON / OFF

Vibrator :

 


Remote :



3. DISTANCE

Remote Control Distance:



5-10m



4. CHANGE PATTERNS



1. Hold "⏻" (on the vibrator) 3s to place it into Standby condition.
2. Hold "⏻" (on the remote) for 3s to turn on, then press "📶" to switch patterns.
3. Hold "⏻" 3 seconds to pause while vibrating. You can restart the device with the remote directly within 20 minutes, otherwise it will be off. Repeat all above to turn it on.

 
*The vibrator can work independently without the remote. Just press "⏻" again to change patterns after standby, and hold for 3s to turn off.

5. USB MAGNETIC CHARGING

1. Vibrator



2. Remote :

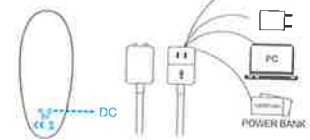

6. PRODUCT CLEANING

- Clean Please clean product with warm water or antibacterial soap.
- Wipe Dry the product with clean cloth or towel.
- Store Keep the product in a cool, dry, clean place.
- Attention Never clean this product with organic cleaner containing alcohol, gasoline or acetone. Avoid direct sunlight.

7. SAFETY

- Do not use it at temperature over 167°F/75 °C.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



MADE IN CHINA