

STIMULATOR FOR WOMEN VIBES OF LOVE WHEEL OF FORTUNE

User manual



CONTROL

- 1) Hold the button for 2 seconds to turn on. The LED indicator will light up and the stimulator will go into standby mode.
- 2) Press the top power button briefly to start the stimulator.
- 3) To start the vibrator, briefly press the bottom button with the vibration symbol.
- 4) Additional short presses control the individual sides.
- 5) You can pause by switching all 9 modes, or turn off the entire vibrator by long pressing the power button for 2 seconds.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent.
You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The stimulator is **waterproof**, so maintenance is very easy.
It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The stimulator is powered by an integrated Li-on battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.
Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a stimulator and USB cable for charging.