

VIBRATOR EASYTOYS MAD RABBIT

User manual



CONTROL

- 1) The vibration intensity is controlled by a single button at the bottom, where you can choose from 7 modes and 3 speeds.
- 2) Short presses change the vibration mode, longer presses turn the vibrator on/off.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.
You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.
Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **waterproof**, so maintenance is very easy.
It may get splashed with water, but you can safely immerse it in water and enjoy water play.

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by three AAA batteries. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.