## ENGLISH / USER MANUAL

BEFORE USE - CHARGE THE RING COMPLETELY BEFORE FIRST USE WITH THE INCLUDED USB CABLE. PLUG THE PINAT IT HE END OF THE CHARGING CABLE. INTO THE CHARGING POINT AT THE FRONT OF THE RINS. CORNECT THE CABLE TO A USB POILT WHEN THE BATTERY IS CHARGING, THE LED LIGHT FLASHES. WHEN THE LIGHT STOPS FLASHING AND BURNS CONSTAUTLY, THE BATTERY IS COMPLETELY CHARGED. OPEN THE BATTERY COMPARTMENT OF THE REMOTE CONTROL AND REMOVE THE PROTECTIVE PLASTIC PLACED WINGET THE BATTERY. CLOSE THE BATTERY COMPARTMENT.

USE – PLACE THE RING AROUND THE BASE OF THE PENIS AND/OR BALLS WHEN THE PENIS IS FLACCID.

DURING AN ERECTION, THE RING TIGHTENS AROUND THE PENIS/BALLS AND RESTRICTS THE BLOOD

FLOW. THIS PROVIDES A HARDER AND LONG-LASTING ERECTION AND MORE INTENSE ORGASMS.

TURNING ON AND OFF. HOLD THE POWER BUTTON FOR A SECONDS TO TURN ON THE BRIC. THE LED LIGHT WILL TURN ON, IF THIS IS NOT THE CASE, THE BATTERY IS EMPTY, CHARGE THE BATTERY FIRST AND THEN TRY ADAM, HOLD THE POWER BUTTON ON THE REMOTE CONTROL. FOR A SECONDS. THE RING STARTS VIBRATING, IF THIS IS NOT THE ACES, THE BATTERY IS EMPTY OR NOT PLACED CORRECTLY. CHECK THE BATTERY AND REPLACE IT IF BASESSARY HOLD THE POWER BUTTON ON THE REMOTE CONTROL. FOR A SECONDS TO TURN OFF THE VIBRATIONS. HOLD THE POWER BUTTON ON THE REMOTE CONTROL. FOR A SECONDS TO TURN OFF THE VIBRATIONS. HOLD THE POWER BUTTON ON THE RING FOR A SECONDS TO TURN OFF THE VIBRATIONS. HOLD THE POWER BUTTON ON THE

OPERATING - THE VARIOUS VIRRATION SETTINGS CAN BE CONTROLLED WITH THE REPOTE CONTROL.
PRESS THE - BUTTON TO GO TO THE NEXT SETTING, PRESS THE - BUTTON TO GO BOACK TO THE
PREVIOUS SETTING. THERE ARE 4 VIRRATION SPEEDS AND O VIRRATION PATTERNS IN TOTAL. THE
VIRRATIONS CAN ALSO BE CONTROLLED WITHOUT THE REPOTE CONTROL. IN THAT CASE, PRESS THE
POWER BUTTON ON THE RINK TO GO TO THE NEXT VIRRATION SETTING.

LUBRICANT - THE RING IS MADE OF SILICONE. THEREFORE IT CAN ONLY BE USED IN COMBINATION WITH WATER-BASED LUBRICANT. OTHER LUBRICANTS CAN NEGATIVELY AFFECT THE MATERIAL, ALLOWING BACTERIA TO GROW AND MAKING IT IMPOSSIBLE TO HYGIENICALLY CLEAN THE TOY.

CLEANING - RINSE THE RING WITH LUKEWARM WATER. APPLY TOY CLEANER TO THE RING AND THOROUGHLY RUB IT CLEAN. REPEAT THIS STEP IF NECESSARY. RINSE THE RING WITH LUKEWARM WATER AND LAY IT DOWN TO DRY OR DAB IT DRY WITH A LINT-FREE CLOTH OR TOWEL.

**STORAGE -** SAFELY STORE THE RING AT A DRY AND DARK PLACE, USE A TOY BAG TO PROTECT THE TOY FROM DUST AND SCRATCHES.

THIS PRODUCT IS SOLD AS A NOVELTY PRODUCT ONLY. ALL RIGHTS RESERVED. TO AVOID INJURY OR AGGRAVATION OF PRE-EXISTING CONDITIONS THIS PRODUCT SIDULD NOT BE USED ON BRUISED, SYDILLEN OR INFLAMED, AREAS, ONLY USE THE PRODUCT AS INSTRUCTED. AND REDICAL CLAIMS ARE WARRANTED OR INFLIED BY THE USE OF THIS PRODUCT, ITS USE IS AT YOUR DWIN RISK. DO NOT ATTEMPY TO WARR THIS PRODUCT IN A HEROWAYER OR CONSTITUTIONAL OVER, WASH BEFORE AND ATTEMPY TO WARR THIS PRODUCT IN AN HEROWAYER OR CONSTITUTIONAL OVER, WASH BEFORE AND ATTEMPY TO WARR THE SPROUGH OF MEROWAYER OF THE ALLOW YOUR OPPORTATION. SECOND THE PRODUCT OF THE TOWN O

## HOW TO USE | EQUIPMENT




2. POSSIBLE POSITIONS








## NEPTUNE | REMOTE-CONTROLLED VIBRATING COCK RING

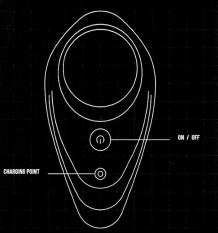

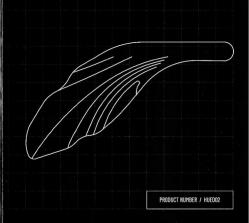

## **EQUIPMENT SPECIFICATIONS**

DITENSIONS VIBRATOR / 107\*50730 MM | 4.2\*\*07-31 MCH
DITENSIONS REMOTE / 617-44\*22 MM | 2.4\*\*1.3\*05 MNCH
MINER DIAMETER RING / 35 MM | 1.3 MNCH
MASS VIBRATOR / 498 | 1.56 02
MASS REMOTE / 156 | 0.5.02
SETTINGS / 4 VIBRATION SPECIES, 6 PATTERINS
REMOTE CONTROL BANGE / 8 M | 2.5 TT
WATER RESISTANCE / 107\*1.9\*12 | REMOTE: 19%4
POWER / TOY: 12-10M, 130 MAIN, 3.7\*1 REMOTE: CR2032 (IPC)
MAX. CHARGING CURRENT / 350 MA
CHARGING VIAGE / 5.0\*V
CHARGING THE / APPROX. 40 MINUTES
OPERATING THE / APPROX. 60 MINUTES
STANDBY THE / UP 10 6 MONTHS

MAX. NOISE LEVEL / <56 DB Materials / ABS, SILICONE







\* REMOVE THE PROTECTIVE PLASTIC BEFORE USE

- U HOLD (3 SEC.) TO TURN THE REMOTE ON
- + PRESS TO CHANGE MODE
- PRESS TO CHANGE MODE



