



## ENGLISH / USER MANUAL

**BEFORE USE -** CHARGE THE VIBRATOR COMPLETELY BEFORE FIRST USE WITH THE INCLUDED USB CABLE. PLUG THE PIN AT THE END OF THE CHARGING CABLE INTO THE CHARGING POINT AT THE BASE OF THE VIBRATOR. CONNECT THE CABLE TO A USB PORT. WHEN THE BATTERY IS CHARGING, THE LED LIGHT BLINKS. WHEN THE LIGHT STOPS BLINKING AND BURNS CONSTANTLY, THE BATTERY IS COMPLETELY CHARGED. OPEN THE BATTERY COMPARTMENT OF THE REMOTE CONTROL AND REMOVE THE PROTECTIVE PLASTIC PLACED UNDER THE BATTERY. CLOSE THE BATTERY COMPARTMENT.

**TURNING ON AND OFF -** HOLD THE + BUTTON ON THE VIBRATOR FOR 3 SECONDS UNTIL THE LED LIGHT TURNS ON. THE VIBRATOR IS NOW IN STAND-BY MODE. IF THE LIGHT DOESN'T TURN ON, THE BATTERY IS EMPTY. CHARGE THE BATTERY FIRST AND THEN TRY AGAIN. HOLD THE POWER BUTTON ON THE REMOTE CONTROL FOR 3 SECONDS. THE VIBRATOR WILL START VIBRATING. IF THIS IS NOT THE CASE, THE BATTERY IS EMPTY OR NOT PLACED CORRECTLY. CHECK THE BATTERY IN THE REMOTE CONTROL AND REPLACE IT IF NECESSARY. AFTER USE, HOLD THE POWER BUTTON ON THE REMOTE CONTROL FOR 3 SECONDS TO TURN OFF THE VIBRATIONS. HOLD THE - BUTTON ON THE VIBRATOR FOR 3 SECONDS TO TURN OFF THE VIBRATOR.

**OPERATING -** THE VARIOUS VIBRATION PATTERNS AND SPEEDS CAN BE CONTROLLED WITH THE REMOTE CONTROL. PRESS THE + BUTTON TO GO TO THE NEXT SETTING. PRESS THE - BUTTON TO GO BACK TO THE PREVIOUS SETTING. THERE ARE 4 VIBRATION SPEEDS AND 6 VIBRATION PATTERNS IN TOTAL. THE VIBRATIONS CAN ALSO BE CONTROLLED WITHOUT THE REMOTE CONTROL. IN THAT CASE, PRESS THE + BUTTON ON THE VIBRATOR TO GO TO THE NEXT VIBRATION SETTING OR THE - BUTTON TO GO BACK TO THE PREVIOUS SETTING.

**LUBRICANT -** THE VIBRATOR IS MADE OF SILICONE AND CAN THEREFORE ONLY BE USED IN COMBINATION WITH WATER-BASED LUBRICANT. OTHER LUBRICANTS CAN NEGATIVELY AFFECT THE MATERIAL, ALLOWING BACTERIA TO GROW AND MAKING IT IMPOSSIBLE TO HYGIENICALLY CLEAN THE TOY.

 
**CLEANING -** RINSE THE VIBRATOR WITH LUKEWARM WATER. APPLY TOY CLEANER TO THE VIBRATOR AND RINSE IT OFF WITH LUKEWARM WATER AGAIN. REPEAT THIS STEP IF NECESSARY. LAY THE VIBRATOR DOWN TO DRY OR DAB IT DRY WITH A CLEAN AND LINT-FREE CLOTH OR TOWEL.

**STORAGE -** SAFELY STORE THE VIBRATOR AT A DRY AND DARK PLACE. USE A TOY BAG TO PROTECT THE TOY FROM DUST AND SCRATCHES.


THIS PRODUCT IS SOLD AS A NOVELTY PRODUCT ONLY. ALL RIGHTS RESERVED. TO AVOID INJURY OR AGGRAVATION OF PRE-EXISTING CONDITIONS THIS PRODUCT SHOULD NOT BE USED ON BRUISED, SWOLLEN OR INFLAMED AREAS. ONLY USE THE PRODUCT AS INSTRUCTED. NO MEDICAL CLAIMS ARE WARRANTED OR IMPLIED BY THE USE OF THIS PRODUCT. ITS USE IS AT YOUR OWN RISK. DO NOT ATTEMPT TO WARM THIS PRODUCT IN A MICROWAVE OR CONVENTIONAL OVEN. WASH BEFORE AND AFTER USE. WITH A MILD SOAP AND WARM WATER. ALLOW TO DRY COMPLETELY BEFORE STORING SEPARATELY FROM OTHER TOYS IN A COOL, DRY PLACE. STORE AT ROOM TEMPERATURE. WE RECOMMEND USING A WATER-BASED LUBRICANT WITH YOUR PRODUCT. PLEASE DO NOT USE PERFUMED OR ALCOHOL-BASED LUBE GELS OR MASSAGE OILS TO AVOID DAMAGE. WE DO NOT RECOMMEND SILICONE-BASED LUBRICANTS OR GELS.

## HOW TO USE | EQUIPMENT

### 1. LUBRICATE FIRST

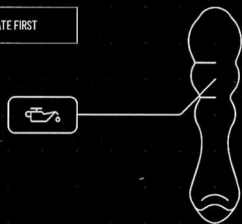


### 2. HOW TO RECHARGE

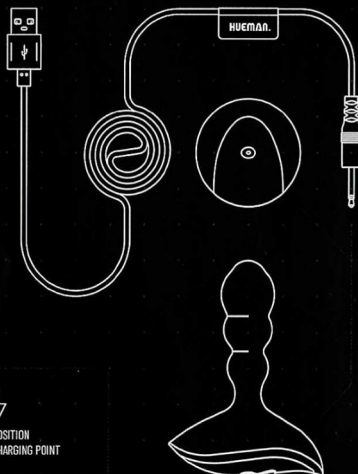 


⚡  
POSITION  
CHARGING POINT

## INTERSTELLAR | REMOTE-CONTROLLED ANAL VIBRATOR

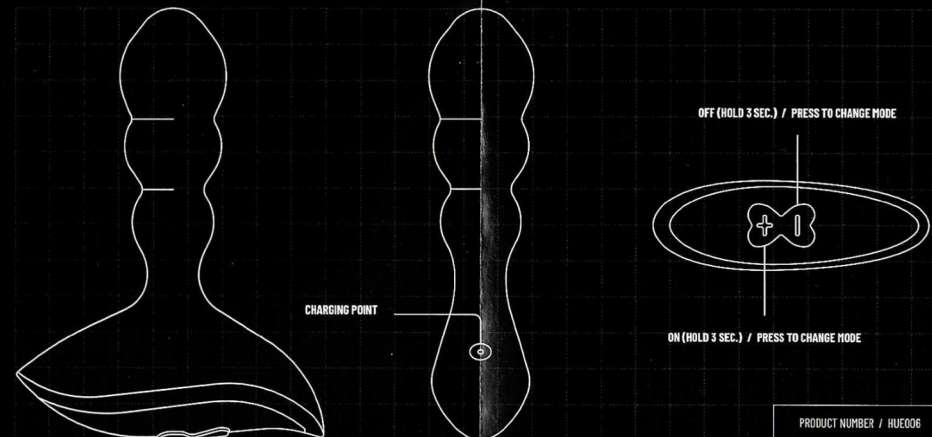 

## EQUIPMENT SPECIFICATIONS

 **DIMENSIONS VIBRATOR** / 121\*88\*31 MM | 4.8\*3.5\*1.2 INCH  
**DIMENSIONS REMOTE** / 61\*34\*22 MM | 2.4\*1.3\*0.9 INCH  
**INSERTABLE LENGTH** / 95 MM | 3.3 INCH  
**MAXIMUM DIAMETER** / 31 MM | 1.2 INCH  
**MASS** / TOY: 88 G | 3.1 OZ / REMOTE: 15 G | 0.5 OZ  
**SETTINGS** / 4 VIBRATION SPEEDS, 6 PATTERNS  
**REMOTE CONTROL RANGE** / 8 M | 26 FT  
**WATER RESISTANCE** / TOY: IPX8 | REMOTE: IPX4  
**POWER** / TOY: LI-ION, 220 MAH, 3.7V | REMOTE: CR2032 (1PC)  
**MAX. CHARGING CURRENT** / 350 MA  
**CHARGING VOLTAGE** / 5.0 V  
**CHARGING TIME** / APPROX. 50 MINUTES  
**OPERATING TIME** / APPROX. 50 MINUTES  
**STANDBY TIME** / UP TO 6 MONTHS  
**MAX. NOISE LEVEL** / <55 DB  
**MATERIALS** / ABS, SILICONE

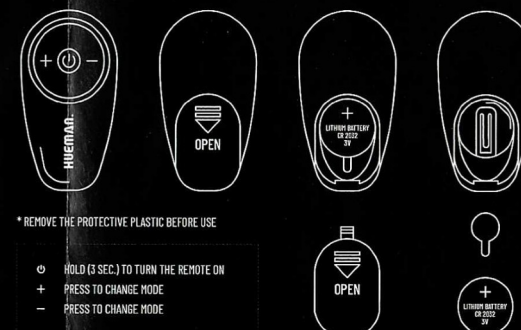

\* REMOVE THE PROTECTIVE PLASTIC BEFORE USE

⏻ HOLD (3 SEC.) TO TURN THE REMOTE ON  
+ PRESS TO CHANGE MODE  
- PRESS TO CHANGE MODE