

# HUEMAN.

INFINITY IGNITE  
VIBRATING COCK & BALL RING



## SPACE LOG | USER MANUAL



## ENGLISH / USER MANUAL

### BEFORE USE

CHARGE THE TOY COMPLETELY BEFORE FIRST USE WITH THE INCLUDED USB CABLE. THE LED LIGHT WILL BLINK WHEN THE TOY IS CHARGING.

### USE

APPLY ANAL LUBRICANT TO THE PLUG AND SLOWLY AND CAREFULLY INSERT IT INTO THE ANUS UNTIL THE RIBBED FLAT PART TOUCHES THE PERINEUM. MAKE SURE THE FLAT BASE OF THE PLUG REMAINS OUTSIDE THE BODY AT ALL TIMES. AFTER USE, REMOVE THE PLUG BY CAREFULLY PULLING ON THE BASE.

### HOW TO OPERATE

TO TURN ON THE TOY, KEEP THE POWER BUTTON PRESSED DOWN FOR 3 SECONDS UNTIL THE TOY VIBRATES ONCE AND THE LED LIGHT TURNS ON. PRESS THE POWER BUTTON ONCE TO SWITCH VIBRATION MODES. TO TURN OFF THE TOY COMPLETELY, KEEP THE POWER BUTTON PRESSED DOWN FOR 3 SECONDS.

### LUBRICANT

USE A WATER-BASED (ANAL) LUBRICANT. WATER-BASED ANAL LUBRICANT IS THICKER THAN REGULAR WATER-BASED LUBRICANT, WHICH MAKES IT PERFECT FOR ANAL PLAY AS THE ANUS DOES NOT LUBRICATE ITSELF. OTHER LUBRICANTS CAN NEGATIVELY AFFECT THE MATERIAL AND ARE THEREFORE DISCOURAGED.

### CLEANING

BEFORE AND AFTER USE, RINSE THE TOY WITH LUKEWARM WATER. APPLY TOY CLEANER AND RINSE IT WITH LUKEWARM WATER AGAIN. REPEAT THIS STEP IF NECESSARY. LAY THE TOY DOWN TO DRY OR DAB IT DRY WITH A LINT-FREE CLOTH OR TOWEL.

### STORAGE

SAFELY STORE THE TOY IN A DRY AND DARK PLACE AWAY FROM EXTREME TEMPERATURES, OUT OF REACH OF CHILDREN AND ANIMALS. USE A TOY BAG TO PROTECT THE TOY FROM DUST AND SCRATCHES. DO NOT STORE THE TOY RIGHT NEXT TO OTHER TOYS.

### SAFETY INSTRUCTIONS

THE PRODUCT SHOULD BE INSERTED INTO THE ANUS VERY CAREFULLY AND SLOWLY TO AVOID ANAL FISSURES. THE PRODUCT CAN CAUSE INJURIES IN THE ANAL AREA IF INSERTED BY FORCE OR IMPROPERLY. DO NOT FULLY INSERT THE TOY INTO THE ANUS. DO NOT USE THE TOY IN THE FOLLOWING SITUATIONS: ON SWOLLEN, IRRITABLE, OR INFLAMED SKIN. AFTER SURGERY IN THE PELVIC AREA. IF ANY PARTS BECOME DAMAGED AND/OR IF YOU HAVE AN ALLERGIC REACTION TO THE MATERIAL OR IF YOU ARE AWARE OF AN EXISTING ALLERGY TO THE MATERIAL. IN CASE OF CARDIOVASCULAR DISEASE, CONSULT A DOCTOR BEFORE USING THE TOY. IN CASE YOU FEEL PAIN AND/OR DISCOMFORT DURING USE, YOU SHOULD STOP USING THE PRODUCT IMMEDIATELY AND REFRAIN FROM FURTHER USE. TO AVOID ILLNESS AND INFECTION, DO NOT SHARE THE TOY WITH OTHERS. DO NOT USE THE TOY IN THE NECK AREA. DO NOT USE WITH OTHER VIBRATING TOYS. DO NOT CHARGE OR USE THE TOY IF THE TOY OR THE CHARGING CABLE IS DAMAGED. DO NOT USE WHILE CHARGING AS THIS CAN CAUSE AN ELECTRIC SHOCK. DO NOT BRING THE CHARGING CABLE INTO CONTACT WITH WATER TO AVOID AN ELECTRIC SHOCK. DO NOT USE A USB HUB TO CHARGE ALONGSIDE OTHER DEVICES. TO PREVENT THE RISK OF FIRE, ONLY USE THE CHARGING CABLE WITH ADAPTERS THAT HAVE SHORT-CIRCUIT PROTECTION. MOISTURE CAN DAMAGE THE MOTOR. IF MOISTURE ENTERS THE INSIDE OF THE TOY, TURN IT OFF IMMEDIATELY. THE TOY MAY ONLY BE USED WHEN THE INSIDE IS COMPLETELY DRY. IN CASE OF OVERHEATING, SWITCH OFF THE TOY IMMEDIATELY AND LET IT COOL DOWN BEFORE USING IT AGAIN. DO NOT CLEAN USING PRODUCTS THAT CONTAIN ALCOHOL, PETROL, ACETONE, OR OTHER CORROSIVE SUBSTANCES. NOT SUITABLE FOR WASHING MACHINES OR DISHWASHERS. THE PRODUCT IS SUITABLE FOR ANAL USE. THE TOY IS ONLY TO BE USED AS INTENDED AND AS DIRECTED.

### DISPOSAL INFORMATION

DO NOT DISPOSE OF THE TOY IN THE HOUSEHOLD WASTE. THE SYMBOL WITH THE CROSSED-OUT DUSTBIN INDICATES THE SEPARATE COLLECTION OF ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE. DISPOSE OF THE TOY IN A COLLECTION POINT FOR THE RECYCLING OF ELECTRONIC DEVICES. AS A DISTRIBUTOR OF ELECTRONIC EQUIPMENT, WE ACCEPT RETURNS OF DISCARDED ELECTRICAL AND ELECTRONIC EQUIPMENT FREE OF CHARGE. CONSIDER LOCAL DISPOSAL OPTIONS AND AVOID THE CREATION OF UNNECESSARY WASTE.

### NEED HELP?

 
IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT, DO NOT HESITATE TO CONTACT CUSTOMER SERVICE. E-MAIL: INFO@HUEMANTOYS.COM. TELEPHONE: +31 (0) 598-890 453. FOR MORE INFORMATION, PLEASE VISIT WWW.HUEMANTOYS.COM.

## HOW TO USE | EQUIPMENT

### 1. LUBRICATE FIRST




### 2. HOW TO RECHARGE

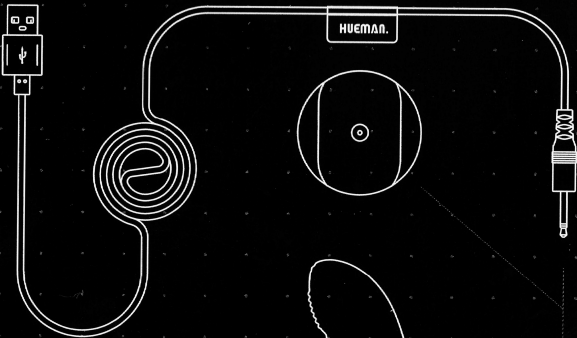


### POSITION CHARGING POINT
 
## GALAXY | ANAL VIBRATOR

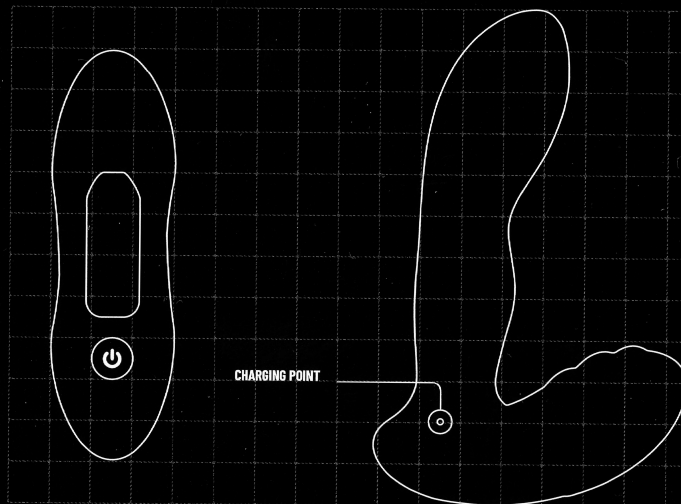


### PARAMETERS ANAL VIBRATOR

 - PINPOINT
- DIAGRAM LINES
- LINE VALUE
- PARAMETER SPECTRUM

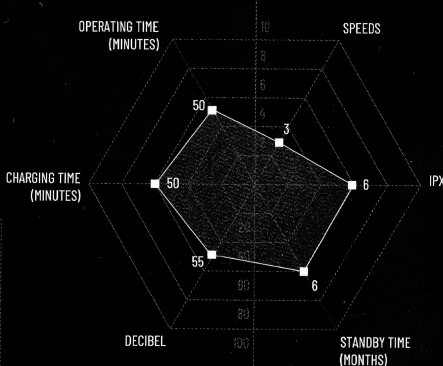

## GALAXY | ANAL VIBRATOR

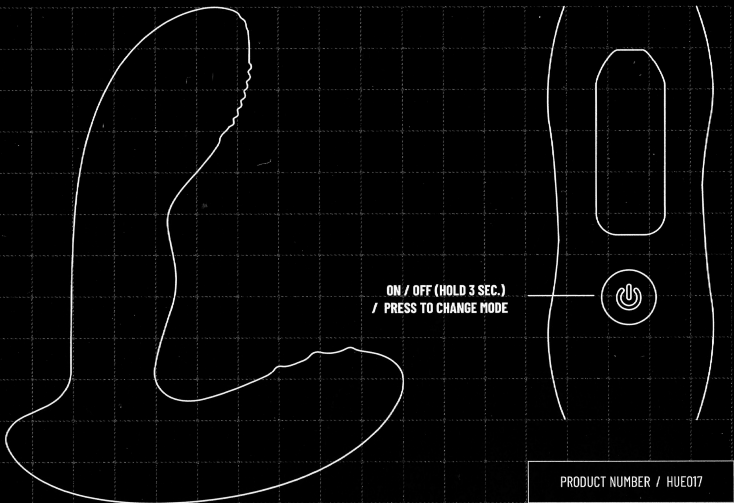 

### EQUIPMENT SPECIFICATIONS

**DIMENSIONS** / 149\*36 MM | 5.9\*1.2 INCH  
**INSERTABLE** / 110 MM | 4.3 INCH  
**BASE** / 102 MM | 4.01 INCH  
**MASS** / 158 G | 5.5 OZ  
**SETTINGS** / 3 VIBRATION SPEEDS, 7 PATTERNS  
**WATER RESISTANCE** / IPX6  
**POWER** / LI-ION, 220 MAH, 3.7V

**MAX. CHARGING CURRENT** / 350 MA  
**CHARGING VOLTAGE** / 5.0 V  
**CHARGING TIME** / APPROX. 50 MINUTES  
**OPERATING TIME** / APPROX. 50 MINUTES  
**STANDBY TIME** / UP TO 6 MONTHS  
**MAX. NOISE LEVEL** / <55 DB  
**MATERIALS** / ABS, SILICONE

HUEMAN.

Hueman. is a registered trademark.  
Produced in license by EDOM Purchasing B.V., produced in China.  
Phoenixweg 6, 9641 KS Veendam NL (EU).  
Customer service +31(0)598 - 68 04 53

www.huemantoy.com  
info@huemantoy.com

