



DISCLAIMER

All rights reserved. This product is under no circumstances to be considered as a medical device.

Only use the product as instructed. Compatible with water-based lubricants. Read the user manual carefully before use.



SPECIFICATIONS

Product size:

Ø 40x82x43 mm | Ø 1.5x3.2x1.7 inches.

Materials:

Silicone, ABS.

Vibration modes:

5 modes.

Waterproof:

IPX7.

Max. noise level:

<55dp.

Power:

Incl. USB charging cable.

Battery:

Polymer Lithium Battery, 240mAh, 5V.



USER MANUAL

Before use

Charge the toy completely before first use with the included USB cable.

Use

This pulsating clitoral stimulator is suitable for external stimulation of the clitoris and other erogenous zones.

How to operate

Keep the power button pressed down for 2 seconds until the toy starts to pulsate. Briefly press the power button to switch to a different pulsation mode. Turn off the toy completely by keeping the power button pressed down for 2 seconds.

Lubricant

Use a water-based lubricant. Other lubricants and massage oil can negatively affect the material and are therefore discouraged.

Cleaning

After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage

Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store the toy right next to other toys.

Safety instructions

Do not use during pregnancy. Do not use on swollen, irritated, or inflamed skin. Do not use if you have allergic reactions to the material. Do not use in the neck area. Do not use during charging as this can lead to an electric shock. Do not use the charger near water to avoid an electric shock. If water enters the toy or the charger, refrain from further use. Clear as much water as possible with a dry cloth and wait 48 hours, till it is completely dry before you

use it again. Do not use a USB hub that is also charging other devices. Do not use or charge if one of the components is damaged. Only use adapters that have short-circuit protection with this charging cable to reduce the risk of fire. Do not clean with products that contain alcohol, petrol, silicone, acetone, or any other corrosive substance. Not suitable for washing machines or dishwashers. In case you feel pain and/or discomfort during use, you should stop using the product immediately and refrain from further use. Only suitable for external application. Only use the toy as intended and as directed.

Disposal information

Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.

Need help?

If you have any questions regarding this product, do not hesitate to contact customer service.

E-mail: helpdesk@easytoys.com.

Telephone: +31 (0) 598-690 453.

For more information, please visit www.easytoys.com.

EasyToys

IT'S PLAYTIME!



EASYTOYS

IS A REGISTERED TRADEMARK.

Produced in license by EQOM Purchasing B.V., produced in China.

Designed in The Netherlands.

Phoenixweg 6, 9641 KS Veendam NL (EU)

Customer service: +31(0)598 - 69 04 53

www.easytoys.com | helpdesk@easytoys.com