

VIBRATOR

Before use

Charge the toy completely before first use with the included USB cable.

Use

This vibrator is suitable for pinpointed stimulation of the erogenous zones, including the G-spot.

How to operate

Keep the power button pressed down for 3 seconds until the light turns on. Briefly press the power button to switch between vibration modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant

Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning

After use, rinse the toy with lukewarm water. Apply toy cleaner or a mild soap and rinse with lukewarm water again. Repeat this step if necessary. Let the toy dry or dab dry with a clean, lint-free cloth or towel.

Storage

Safely store the toy in a dry and dark place away from extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store the toy right next to other toys.

Safety instructions

Do not use the toy in the following situations: on swollen, irritated or inflamed skin, in case of vaginal infection, in the first 6 weeks after childbirth, after surgery in the pelvic area, if one of the components is damaged and/or if you have an allergic reaction to the material or if you are aware of an allergy to the material. In case of cardiovas-

USER MANUAL

EN

cular diseases or pregnancy, consult your doctor before using the toy. If pain and/or discomfort occurs during use, stop using the toy immediately and refrain from further use. Do not use the toy in the neck area. Do not share the toy with others to avoid illness and infection. Do not charge or use if the toy or charging cable is damaged. Do not use while charging as this may cause an electric shock. Do not use the charger near water to avoid an electric shock. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Do not clean using products that contain alcohol, petrol, acetone, or other corrosive substances. Not suitable for washing machines or dishwashers. Only use the toy as intended and as directed.

Disposal information

Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.

Need help?

If you have any questions regarding this product, do not hesitate to contact customer service.

☎ +31 (0) 598-690 453

✉ info@loveboxxx.eu

🌐 www.loveboxxx.eu