

COUPLE TOY

Before use

Charge the toy completely before first use with the included USB cable.

Use

This flexible toy can be bend to your preference and can be used for G-spot, clitoral, or general external stimulation. This vibrator can also be worn internally during penetration so that both partners can optimally enjoy the intense vibrations.

How to operate

To turn on the toy, keep the power button pressed down for 3 seconds until the toy starts to vibrate. Briefly press the power button to switch between vibration modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant

Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning

After use, rinse the toy with lukewarm water. Apply toy cleaner or a mild soap and rinse with lukewarm water again. Repeat this step if necessary. Let the toy dry or dab dry with a clean, lint-free cloth or towel.

Storage

Safely store the toy in a dry and dark place away from extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store the toy right next to other toys.

Safety instructions

Do not use the toy in the following situations: on swollen, irritated or inflamed skin, in case of vaginal infection or injuries to the penis, in the first 6 weeks after childbirth, after surgery in the pelvic

USER MANUAL

EN

area, if one of the components is damaged and/or if you have an allergic reaction to the material or if you are aware of an allergy to the material. In case of cardiovascular diseases or pregnancy, consult your doctor before using the toy. If pain and/or discomfort occurs during use, stop using the toy immediately and refrain from further use. Do not use the toy in the neck area. Do not share the toy with others to avoid illness and infection. Do not charge or use if the toy or charging cable is damaged. Do not use while charging as this may cause an electric shock. Do not use the charger near water to avoid an electric shock. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Do not clean using products that contain alcohol, petrol, acetone, or other corrosive substances. Not suitable for washing machines or dishwashers. Only use the toy as intended and as directed.

Disposal information

Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.