

CELESTE - MINI WAND - AC24-01-LOB2B

EN	
Vibration Settings	10 Vibration Modes
Measurements	100 x 41mm / 3.94 x 1.61inch
Weight	70gr / 2.47oz
Materials	Silicone, ABS
Waterproof	IPX7, Product can be submerged in water for 30 minutes at a depth of 1 meter
Noise Level	<50 db
Battery Type	Li-ion
Battery Capacity	200mAh
Battery Voltage	3.7V
Max. Charging Current	300mAh
Charging Voltage	5V
Charging Time	Approximately 60 min
Operating Time	Approximately 50 min
Interface	USB-A, Magnetic Charge

Celeste
MINI WAND
AC24-01-LOB2B
Intended use
This mini wand vibrator is perfect for stimulating external erogenous zones, like the clitoris, or for massaging various body parts, like the arms or thighs.

Before use
Charge the toy completely before first use with the included charging cable.

How to operate
To turn on the toy, keep the power button pressed down for 3 seconds until the toy starts to vibrate. Press the vibration button to switch between the different vibration modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant
Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning
After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage
Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions
Do not use the toy in the following situations: on swollen, irritated, or inflamed skin, in case of vaginal infection, during the first 6 weeks after childbirth, following surgery in the pelvic area, if any parts are damaged and/or if you have an allergic reaction to the material or if you are aware of an existing allergy to the material. If you are pregnant or in case of cardiovascular disease, consult your doctor before using the toy. If you feel any pain and/or discomfort during use, stop using the product immediately and refrain from any further use. Do not use the toy in the neck area. To avoid illness and infection, do not share the toy with others. Do not charge or use if the toy or charging cable is damaged. Do not use while charging, as this can cause an electric shock. To avoid an electric shock, do not allow the charging cable to encounter water. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Moisture can damage the motor. Immediately turn off the toy if moisture gets into the inside of the toy. The toy should only be used if the inside of the toy is completely dry. Do not clean using products that contain alcohol, petrol, acetone, silicone, or other corrosive substances. Not suitable for washing machines or dishwashers. Suitable for external use. Only use the toy as intended and as directed.

Disposal information
Do not dispose of this product in household waste. The symbol of the crossed-out dustbin indicates the separate collection of electrical and electronic waste. Dispose of the product at a collection point for the recycling of electronic devices. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Consider local disposal options and avoid the creation of unnecessary waste.

Need help?
If you have any questions regarding this product, do not hesitate to contact customer service.
☎ +31 (0) 598-690 453
✉ info@loveboxxx.eu
🌐 www.loveboxxx.eu

ZEN - VIBRATING STROKER - AC24-21-LOB2B

EN	
Vibration Settings	10 modes
Measurements	56,4 x 56,24 x 80,17 mm / 2.22 x 2.21 x 3.16 inch
Diameter	33,08mm / 1.30inch
Circumference	175,84mm / 6.92inch
Insertable dimensions	80,17mm / 3.16inch
Weight	101gr / 3.10oz
Materials	Silicone, ABS
Phthalates Free	Yes
Waterproof	IPX5, can be sprayed with water up to 15 minutes.
Noise Level	<60 db
Battery Type	Li-ion
Battery Capacity	300mAh
Battery Voltage	3.7V
Max. Charging Current	300mAh
Charging Voltage	5V
Charging Time	Approximately 120 min
Operating Time	Approximately 60 min
Interface	USB A, Magnetic Charge

Zen
VIBRATING STROKER
AC24-21-LOB2B
Intended use
Apply some water-based lubricant to the penis and the inside of the stroker. Place the stroker on the penis, start the vibrations and gently slide the stroker up and down the shaft of the penis.

Before use
Charge the toy completely before first use with the included charging cable.

How to operate
To turn on the toy, keep the power button pressed down for 3 seconds until the toy vibrates once. Press the power button to turn on the vibrations and to switch between the different vibration modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant
Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning
After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage
Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions
Do not use the toy in the following situations: on swollen, irritated, or inflamed skin or in case of other injuries to the penis, after surgery in the pelvic area, if one of the components is damaged and/or if you have an allergic reaction to the material or if you are aware of an existing allergy to the material. Consult your doctor before use in case of cardiovascular disease. If you feel any pain and/or discomfort during use, stop using the product immediately and refrain from any further use. Do not use the toy in the neck area. To avoid illness and infection, do not share the toy with others. Do not charge or use if the toy or charging cable is damaged. Do not use while charging, as this can cause an electric shock. To avoid an electric shock, do not allow the charging cable to encounter water. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Moisture can damage the motor. Immediately turn off the toy if moisture gets into the inside of the toy. The toy should only be used if the inside of the toy is completely dry. Do not clean using products that contain alcohol, petrol, acetone, silicone, or other corrosive substances. Not suitable for washing machines or dishwashers. Suitable for use on the penis. Only use the toy as intended and as directed.

Disposal information
Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.

Need help?
If you have any questions regarding this product, do not hesitate to contact customer service.
☎ +31 (0) 598-690 453
✉ info@loveboxxx.eu
🌐 www.loveboxxx.eu

QUINN - CLITIROS STIMULATOR - AC24-09-LOB2B

EN	
Vibration Settings	6 patterns
Measurements	68 x 38mm / 2.68 x 1.50inch
Weight	49gr / 1.73oz
Materials	Silicone, ABS
Phthalates Free	Yes
Waterproof	IPX7, Product can be submerged in water for 30 minutes at a depth of 1 meter
Noise Level	<70 db
Battery Type	Li-ion
Battery Capacity	120mAh
Battery Voltage	3.7V
Max. Charging Current	100mAh
Charging Voltage	5V
Charging Time	Approximately 60 min.
Operating Time	Approximately 60 min
Interface	USB-A, Magnetic Charge

Quinn
CLITIROS STIMULATOR
AC24-09-LOB2B
Intended use
This toy is perfect for targeted stimulation of the clitoris and other external erogenous zones, like the nipples.

Before use
Charge the toy completely before first use with the included charging cable. Take off the cap before use.

How to operate
To turn on the toy, keep the power button pressed down for 3 seconds. Press the power button again to switch between the different licking modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant
Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning
After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage
Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions
Do not use the toy in the following situations: on swollen, irritated, or inflamed skin, in case of vaginal infection, during the first 6 weeks after childbirth, following surgery in the pelvic area, if any parts are damaged and/or if you have an allergic reaction to the material or if you are pregnant or in case of cardiovascular disease, consult your doctor before using the toy. If you feel any pain and/or discomfort during use, stop using the product immediately and refrain from any further use. Do not use the toy in the neck area. To avoid illness and infection, do not share the toy with others. Do not charge or use if the toy or charging cable is damaged. Do not use while charging, as this can cause an electric shock. To avoid an electric shock, do not allow the charging cable to encounter water. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Moisture can damage the motor. Immediately turn off the toy if moisture gets into the inside of the toy. The toy should only be used if the inside of the toy is completely dry. Do not clean using products that contain alcohol, petrol, acetone, silicone, or other corrosive substances. Not suitable for washing machines or dishwashers. Suitable for external use. Only use the toy as intended and as directed.

Disposal information
Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.

Need help?
If you have any questions regarding this product, do not hesitate to contact customer service.
☎ +31 (0) 598-690 453
✉ info@loveboxxx.eu
🌐 www.loveboxxx.eu

SAGE - COUPLE TOY - AC24-24-LOB2B

EN	
Vibration Settings	10 Patterns
Measurements	81 x 64 x 40 mm / 3.19 x 2.52 x 1.57 inch
Weight	60 g / 1.12 oz
Materials	Silicone, ABS
Phthalates Free	Yes
Waterproof	IPX7, Product can be submerged in water for 30 minutes at a depth of 1 meter
Noise Level	<65 db
Battery Type	Li-ion
Battery Capacity	230mAh
Battery Voltage	3.7V
Max. Charging Current	250mAh
Charging Voltage	5V
Charging Time	Approximately 60 min
Operating Time	Approximately 45 min.
Interface	USB A, Magnetic Charge

Sage
COUPLE TOY
AC24-24-LOB2B
Intended use
This couple vibrator can be used anally or vaginally and can be kept in during intercourse. Make sure to never insert the toy fully into the anus, but always keep one of the ends of the vibrator outside of the body.

Possible uses:
Insert the U-shaped vibrator vaginally so that the big part of the vibrator lays on the clitoris.
Insert the U-shaped vibrator vaginally and the big vibrator anally.
Put the U-shaped vibrator around the penis during penetration.

Before use
Charge the toy completely before first use with the included charging cable.

How to operate
To turn on the toy, keep the power button pressed down for 3 seconds until the toy starts to vibrate. Press the power button again to switch between the different vibration modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant
Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning
After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage
Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions
Do not use in the following situations: on swollen, irritated or inflamed skin, in case of vaginal infection, after surgery in the pelvic or anal area, in the first 6 weeks after childbirth, if one of the components is damaged and/or if you have an allergic reaction to one of the materials or if you are aware of an existing allergy to one of the materials. If you suffer from cardiovascular disease or if you are pregnant, consult your doctor before using the toy. If you feel any pain and/or discomfort during use, you should stop using the product immediately and refrain from any further use. Do not use the toy in the neck area. Do not share the toy with others to avoid illness and infection. Do not charge or use if the toy or charging cable is damaged. Do not use while charging as this can cause an electric shock. Do not use the charger near water to avoid an electric shock. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. Moisture can damage the engine. If moisture enters the inside of the toy, turn it off immediately and remove as much water as possible. The toy may only be used when the toy is completely dry. In case of overheating, switch the toy off immediately and allow it to cool before using again. The product should be inserted into the anus very carefully and slowly to avoid anal fissures. The product can cause injuries in the anal area if used forcibly or improperly. Do not insert the toy completely into the anus. Do not clean using products that contain alcohol, petrol, acetone, or other corrosive substances. Not suitable for washing machines or dishwasher. Suitable for vaginal and anal use. Only use the toy as intended and as directed.

Disposal information
Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.

Need help?
If you have any questions regarding this product, do not hesitate to contact customer service.
☎ +31 (0) 598-690 453
✉ info@loveboxxx.eu
🌐 www.loveboxxx.eu

KAI - VIBRATING COCK RING - AC24-03-LOB2B

EN	
Vibration Settings	10 Vibration Modes
Measurements	69 x 43 x 35mm / 2.72 x 1.69 x 1.38inch
Weight	32gr / 1.13oz
Materials	Silicone, ABS
Phthalates Free	Yes
Waterproof	IPX7, Product can be submerged in water for 30 minutes at a depth of 1 meter
Noise Level	<50 db
Battery Type	Li-ion
Battery Capacity	120mAh
Battery Voltage	3.7V
Max. Charging Current	150mAh
Charging Voltage	5V
Charging Time	Approximately 30 min.
Operating Time	Approximately 50 min.
Interface	USB-A, Magnetic Charge

Kai
VIBRATING COCK RING
AC24-03-LOB2B
Intended use
Place the ring around the penis when it is flaccid. During an erection, the ring tightens around the penis and restricts the blood flow. This can provide a harder and long-lasting erection and more intense orgasms. At the same time, the vibrating top can stimulate your partner during intercourse.

Before use
Charge the toy completely before first use with the included charging cable.

How to operate
To turn on the toy, keep the power button pressed down for 3 seconds until the LED light turns on. Press the power button again to start the vibrations and to switch between the different vibration modes. Press the tapping button to start the tapping mode and to switch between the different tapping modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant
Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning
After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage
Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions
A product that fits too tightly can cause circulatory problems and other injuries. Don't wear the product for more than 30 minutes. In case you feel pain and/or discomfort during use, stop using the product immediately and refrain from further use. Do not use the toy in the following situations: on swollen, irritated, or inflamed skin or other injuries to the penis, if one of the components is damaged and/or if you have an allergic reaction to the material or if you are aware of an existing allergy to the material. In case of cardiovascular, vascular, nervous or blood clotting diseases, diabetes mellitus or pregnancy of your partner, consult your doctor before using the toy. Do not use the toy in the neck area. Do not use with other vibrating toys. Do not share the toy with others to avoid illness and infection. Do not charge or use if the toy or charging cable is damaged. Do not use while charging, as this can cause an electric shock. To avoid an electric shock, do not bring the charging cable in contact with water. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Do not clean with products that contain alcohol, petrol, silicone, acetone, or other corrosive substances. Not suitable for the washing machine or dishwasher. Be careful if you use this toy with a condom because the condom can be damaged by contact with the toy. Only suitable for external use. Only use the toy as intended and as directed.

Disposal information
Do not dispose of this product in household waste. The symbol of the crossed-out dustbin indicates the separate collection of electrical and electronic waste. Dispose of the product at a collection point for the recycling of electronic devices. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Consider local disposal options and avoid the creation of unnecessary waste.

Need help?
If you have any questions regarding this product, do not hesitate to contact customer service.
☎ +31 (0) 598-690 453
✉ info@loveboxxx.eu
🌐 www.loveboxxx.eu

MORGAN - TAPPING RABBIT VIBRATOR- AC24-05-LOB2B

EN	
Vibration Settings	10 tapping patterns, 10 vibrating modes
Measurements	178 x 37 x 64mm / 7.01 x 1.46 x 2.52inch
Insertable Dimensions	94mm x 3.70inch
Weight	139g / 4.90oz
Materials	Silicone, ABS
Phthalates Free	Yes
Waterproof	IPX7, Product can be submerged in water for 30 minutes at a depth of 1 meter
Noise Level	<65 db
Battery Type	Li-ion
Battery Capacity	500mAh
Battery Voltage	3.7V
Max. Charging Current	380mAh
Charging Voltage	5V
Charging Time	Approximately 120 min
Operating Time	Approximately 60 min.
Interface	USB-A, Magnetic Charge

Morgan
TAPPING RABBIT VIBRATOR
AC24-05-LOB2B
Intended use
The rabbit vibrator is perfect for simultaneous stimulation of the vagina, G-spot, and clitoris.

Before use
Charge the toy completely before first use with the included charging cable.

How to operate
To turn on the toy, keep the power button pressed down for 3 seconds until the LED light turns on. Press the power button again to start the vibrations and to switch between the different vibration modes. Press the tapping button to start the tapping mode and to switch between the different tapping modes. Keep the power button pressed down for 3 seconds to turn off the toy completely.

Lubricant
Use a water-based lubricant. Other lubricants and massage oils can negatively affect the material and are therefore discouraged.

Cleaning
After use, rinse the toy with lukewarm water. Apply toy cleaner or mild soap and rinse it with lukewarm water again. Repeat this step if necessary. Lay the toy down to dry or dab it dry with a lint-free cloth or towel.

Storage
Safely store the toy in a dry and dark place without extreme temperatures, out of reach of children and animals. Use a toy bag to protect the toy from dust and scratches. Do not store this product right next to other toys.

Safety instructions
Do not use the toy in the following situations: on swollen, irritated, or inflamed skin, in case of vaginal infection, during the first 6 weeks after childbirth, following surgery in the pelvic area, if any parts are damaged and/or if you have an allergic reaction to the material or if you are aware of an existing allergy to the material. If you are pregnant or in case of cardiovascular disease, consult your doctor before using the toy. If you feel any pain and/or discomfort during use, stop using the product immediately and refrain from any further use. Do not use the toy in the neck area. To avoid illness and infection, do not share the toy with others. Do not charge or use if the toy or charging cable is damaged. Do not use while charging, as this can cause an electric shock. To avoid an electric shock, do not allow the charging cable to encounter water. Do not use a USB hub to charge alongside other devices. To prevent fire, only use the charging cable with adapters that have short-circuit protection. In case of overheating, switch the toy off immediately and allow it to cool before using again. Moisture can damage the motor. Immediately turn off the toy if moisture gets into the inside of the toy. The toy should only be used if the inside of the toy is completely dry. Do not clean using products that contain alcohol, petrol, acetone, silicone, or other corrosive substances. Not suitable for washing machines or dishwashers. Suitable for vaginal and external use. Only use the toy as intended and as directed.

Disposal information
Do not dispose of the toy in household waste. Dispose of the toy in an environmentally friendly manner at a collection point for the recycling of electronic devices. The symbol with the crossed-out dustbin indicates the separate collection of electrical and electronic equipment. As a distributor of electronic equipment, we accept returns of discarded electrical and electronic equipment free of charge. Pay attention to local disposal options. Avoid the creation of unnecessary waste.

Need help?
If you have any questions regarding this product, do not hesitate to contact customer service.
☎ +31 (0) 598-690 453
✉ info@loveboxxx.eu
🌐 www.loveboxxx.eu