
QUICK START GUIDE


SIZE

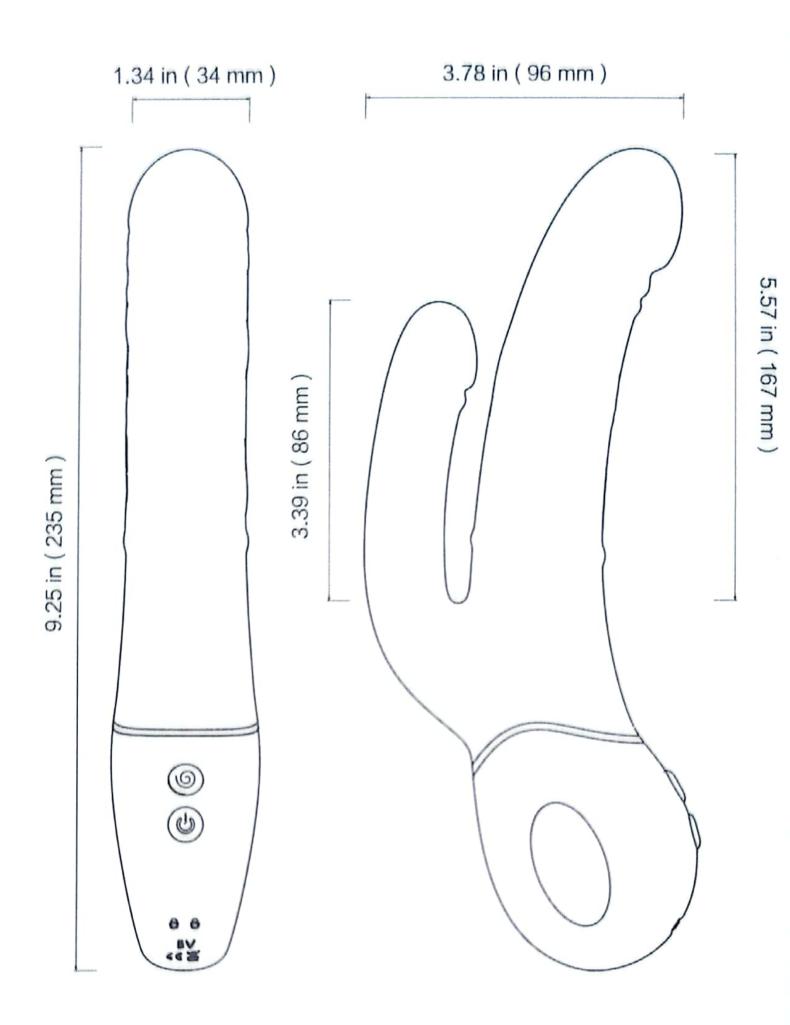

FUNCTION




- ON/OFF: Hold on "" for 3 seconds
 - Hold the "6" button to change vibrating patterns of the rabbit, 9 patterns in total

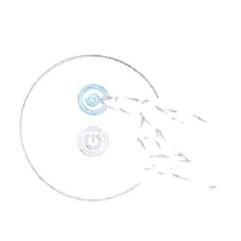



Press "
"
"
to change vibration of the shaft, 9 patterns in total



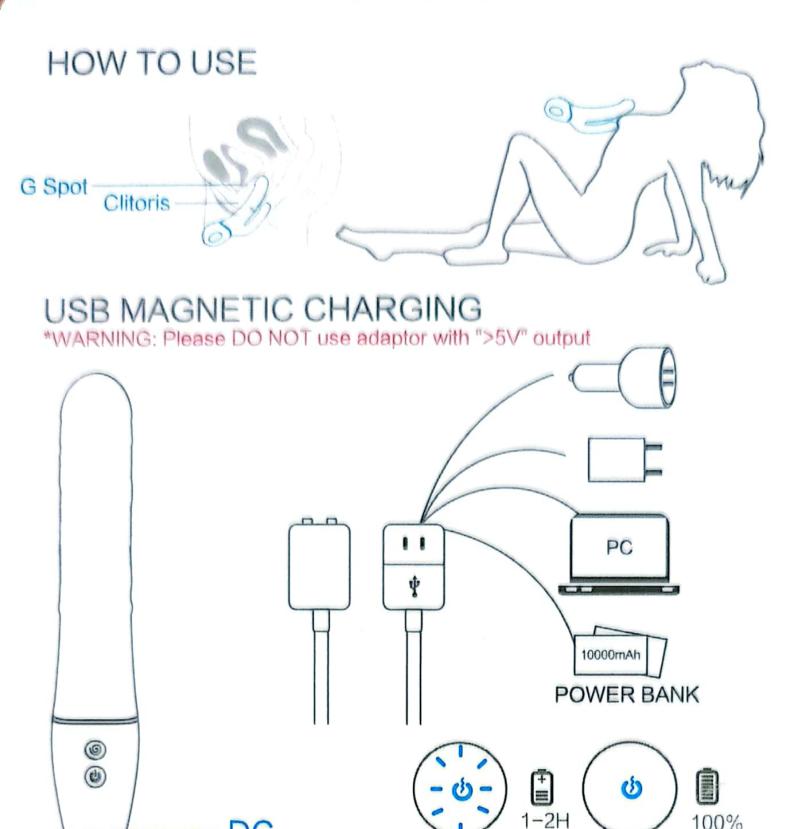

- . Connect the device to USB port to charge .
- * Do not use the device while charging.
- Please connect with power adapter below 5V.
- . Can not keep in water for a long time.
- If the product can't be charged when electrified, please wait for 10 mins to confirm.

PRODUCT CLEANING

- Clean Please clean product with warm water or antibacterial soap.
- Wipe Dry the product with clean cloth or towels.
- Save Keep the product in a cool, dry and clean place.
- Attention Never clean this product with organic cleaner that contains alcohol, gasoline or acetone. Avoid direct sunshine.

SAFETY

- Do not use it at temperature over 167°F/75 ℃.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.

