QUICK START GUIDE



DISTANCE

Remote Control Distance: 5–10m

2

0



CHANGE PATTERNS



- 1.Hold "" (on the vibrator) 3s to place it into Standby condition.
- 2. Hold "" (on the remote) for 3s to turn on, then press "" to switch patterns.
- 3. Hold "b" 3 seconds to pause while vibrating. You can restart the device with the remote directly within 20 minutes, otherwise it will be off. Repeat all above to turn it on.
- *The vibrator can work independently without the remote. Just press """ again to change patterns after standby, and hold for 3s to turn off.

USB CHARGING

*WARNING: Please DO NOT use adaptor with ">5V" output 1. Vibrator



PRODUCT CLEANING

- · Clean Please clean product with warm water or antibacterial soap.
- Wipe Dry the product with clean cloth or towel.
- Store Keep the product in a cool, dry, clean place.
- Attention Never clean this product with organic cleaner containing alcohol, gasoline or acetone. Avoid direct sunlight.

SAFETY

- Do not use it at temperature over 167 F/75 ℃.
- Stop using it when any discomfort occurs.
- It is recommended to use it with water-based lubricant.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.



