



pleasure box



COUPLES VIBE

EN

Buttons:

Press the [on/off] button for 2 seconds to turn the vibrator on/off. Press again to change the vibrations: 7 vibration rhythms with 4 intensities each. Long press to turn the device off.

Or use the wireless remote control to turn the vibrator on/off with the [on/off] button. Change the vibrations with the + and - buttons.

How to charge:

Magnetic USB charging. When the charging cable is attached to the 2 magnets on the product and the USB-end is plugged in to a computer or USB charger, the indicator will light up, the button will flash, and the device will start charging. It takes 90 minutes to fully charge. When the device is fully charged, the indicator

Tonga BV
Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

EN

light stops flashing. After that the device can work continuously for 50 minutes. The wireless remote control is not rechargeable. It contains an AAA battery.

41B035

Cleaning and maintenance:

Clean the device with warm water and soap. Pat dry with a clean lint-free cloth. Keep the product in a cool and dry place, clean and separate from other materials and out of children's reach. Avoid direct sunlight or high temperature. Don't use alcohol to clean the product. This would corrode the surface and accelerate the aging process.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.



pleasure box

WAND MASSAGER



EN

Buttons:

Press the [on/off] button for 2 seconds to turn the wand head on/off. Press again to change the vibrations: 3 vibration speeds and 7 rhythms. Long press to turn the device off.

How to charge:

USB pin charging. When the pin-end of the charging cable is inserted into the charging hole and the USB end is plugged in to a computer or USB charger, the indicator will start flashing, and the device will start charging. It takes 90 minutes to fully charge. When the device is fully charged, the indicator light stops flashing. After that the device can work continuously for 45 minutes.

41B007

Tonga BV
Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

EN

Cleaning and maintenance:

Clean the device with warm water and soap. Wash away the soap with hot water. Pat it dry with a clean lint-free cloth or a microfiber towel so no fluff will be left on it. Put the product in a dry place. Keep the storage environment clean and separate from other materials and out of children's reach. Store in a cool and dry place to avoid direct sunlight or high temperature. Don't use alcohol to clean the product. This would corrode the surface and accelerate the aging process.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.

To use the Wand Massager for a massage we recommend using massage oil or a water-based lube. Not only is the Wand massage great for a relaxing massage but also fantastic for satisfying stimulation.

Although the Wand massager is known to mainly stimulate the clitoris, it can also

effectively stimulate two very sensitive male pleasure spots, the frenulum and the perineum.



pleasure box

FINGER VIBRATOR



EN

Buttons:

Press the [on/off] button for 3 seconds to turn the vibrator on/off. Press again to change the vibrations: 10 vibration modes. Long press again to turn the device off. The 3 LR44 batteries in the vibrating bullet are included.

Cleaning and maintenance:

Clean the device with warm water and soap. Wash away the soap with hot water.

Pat it dry with a clean lint-free cloth or a microfiber towel so no fluff will be left on it.

Put the product in a dry place. Keep the storage environment clean and separate from other materials and out of children's reach. Store in a cool and dry place to avoid direct sunlight or high temperature.

EN

Don't use alcohol to clean the product. This would corrode the surface and accelerate the aging process.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.

41B005

Tonga BV
Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

Slide the finger vibrator over the finger you want to use. This will turn your finger into a magical vibrating toy! To make it extra sensual and exciting you can also use lubricant.

The finger vibrator is perfect for solo use but it is even more fun together. Discover all your sensitive spots such as the clitoris, vagina, vulva, nipples, penis, balls and anal area. Use the different vibrations to playfully massage these erogenous zones!



pleasure box



DUO VIBRATOR

EN

Buttons:

Press the [on/off] button for 2 seconds to turn the vibrator on/off. Press again to change the vibrations: 2 vibration speeds and 8 rhythms. Long press to turn the device off.

How to charge:

USB pin charging. When the pin-end of the charging cable is inserted into the charging hole and the USB end is plugged in to a computer or USB charger, the indicator will start flashing, and the device will start charging. It takes 60 minutes to fully charge. When the device is fully charged, the indicator light stops flashing. After that the device can work continuously for 50-70 minutes.

41B016

Tonga BV
Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

EN

Cleaning and maintenance:

Clean the device with warm water and soap. Wash away the soap with hot water. Pat it dry with a clean lint-free cloth or a microfiber towel so no fluff will be left on it. Put the product in a dry place. Keep the storage environment clean and separate from other materials and out of children's reach. Store in a cool and dry place to avoid direct sunlight or high temperature. Don't use alcohol to clean the product. This would corrode the surface and accelerate the aging process.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.

Use a little lubricant from box 7 and apply this to the Duo vibrator. Are you new to this? Sit on your knees with your legs slightly apart. This will give you a better view of what you are doing.

Once you are more experienced with the duo vibrator you can then choose any position.

The duo vibrator stimulates the clitoris and G-spot at the same time. But first you need to find the right positions and angles. After this, you can move the duo vibrator back and forth to introduce the G-spot and clitoris to this double stimulation. Discover the various vibration modes and enjoy!



pleasure box



VIBRATING COCKRING

EN

Buttons:

Press the [on/off] button for 3 seconds to turn the vibrator on/off. Press again to change the vibrations: 7 vibration modes. Long press again to turn the device off. The 3 LR44 batteries in the vibrating bullet are included.

Cleaning and maintenance:

Clean the device with warm water and soap. Wash away the soap with hot water.

Pat it dry with a clean lint-free cloth or a microfiber towel so no fluff will be left on it.

Put the product in a dry place. Keep the storage environment clean and separate from other materials and out of children's reach. Store in a cool and dry place to avoid direct sunlight or high temperature.

EN

Don't use alcohol to clean the product. This would corrode the surface and accelerate the aging process.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.

41B006

Tonga BV
Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

You place the cockring around the penis when it is in a flaccid or semi-flaccid state. The ring will tighten around the penis once it is erected.

This cockring has a small multi vibrating bullet on the top. It is positioned to vibrate against the clitoris during penetration. The

best lovemaking position for maximum pleasure is the Cowgirl.

The benefits of a cockring are:

- Harder and longer lasting erection
- Delayed ejaculation
- Intense orgasm
- Stimulation for your partner