

AMOUR



HEARTSHAPED VIBRATOR

EN

Buttons:

For external use, do not insert into the private parts.

Press the start button for 2 seconds, and the indicator will light up. Short press to change the vibrations: 10 vibration modes. Long press for 2 seconds to turn off the device.

How to charge:

Connect the pin-end to the charging hole in the vibrator and the USB-end to a computer or USB charger. The indicator light will blink during charging. When the vibrator is fully charged the light will be on. It is recommended to charge the product for 1 hour before the first use, and a full charge generally takes about 2 hours.

Tonga BV

Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

EN

Cleaning and maintenance:

Clean the product with warm water and soap. Wash the soap away with hot water. Use a clean lint-free cloth or microfiber towel to dry. Store the product in a dry place, in a clean environment, and keep it separate from other items to avoid children's contact. Do not use alcohol to clean it, because alcohol will corrode the surface and accelerate aging.

Caution: This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.