

AMOUR



PANTY
VIBRATOR

EN

Buttons:

For external use, do not insert into the private parts.

Press the [on/off] button for 3 seconds to turn the vibrator on/off. Press again to change the vibrations: 10 vibration modes. Long press to turn the device off.

Or use the wireless remote control to turn the vibrator on/off with the [on/off] button. Change the vibrations with the + and - buttons.

How to charge:

Magnetic USB charging When the charging cable is attached to the 2 magnets on the product and the USB-end is plugged in to a computer or USB charger, the indicator will light up, the button will flash, and the device will start charging.

The wireless remote control is not rechargeable. It contains a CR2032 battery.

Tonga BV

Noordpolderstraat 21

4571 LR Axel

The Netherlands

www.tongabv.com

EN

Cleaning and maintenance:

Clean the product with warm water and soap. Wash the soap away with hot water. Use a clean lint-free cloth or microfiber towel to dry. Store the product in a dry place, in a clean environment, and keep it separate from other items to avoid children's contact. Do not use alcohol to clean it, because alcohol will corrode the surface and accelerate aging.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.